


# Installation Guide for HPS and BC55RPB-W System

## 1. System Components Overview

HPS Inverter (Models from HPS15000TL to HPS50000TL)  
BC55RPB-W (Battery Cabinet with Mounting Structure)  
BPU (Battery Pack Unit)  
DC-DB-50KTL-M (DC Distribution Box)

## 2. Wiring Instructions

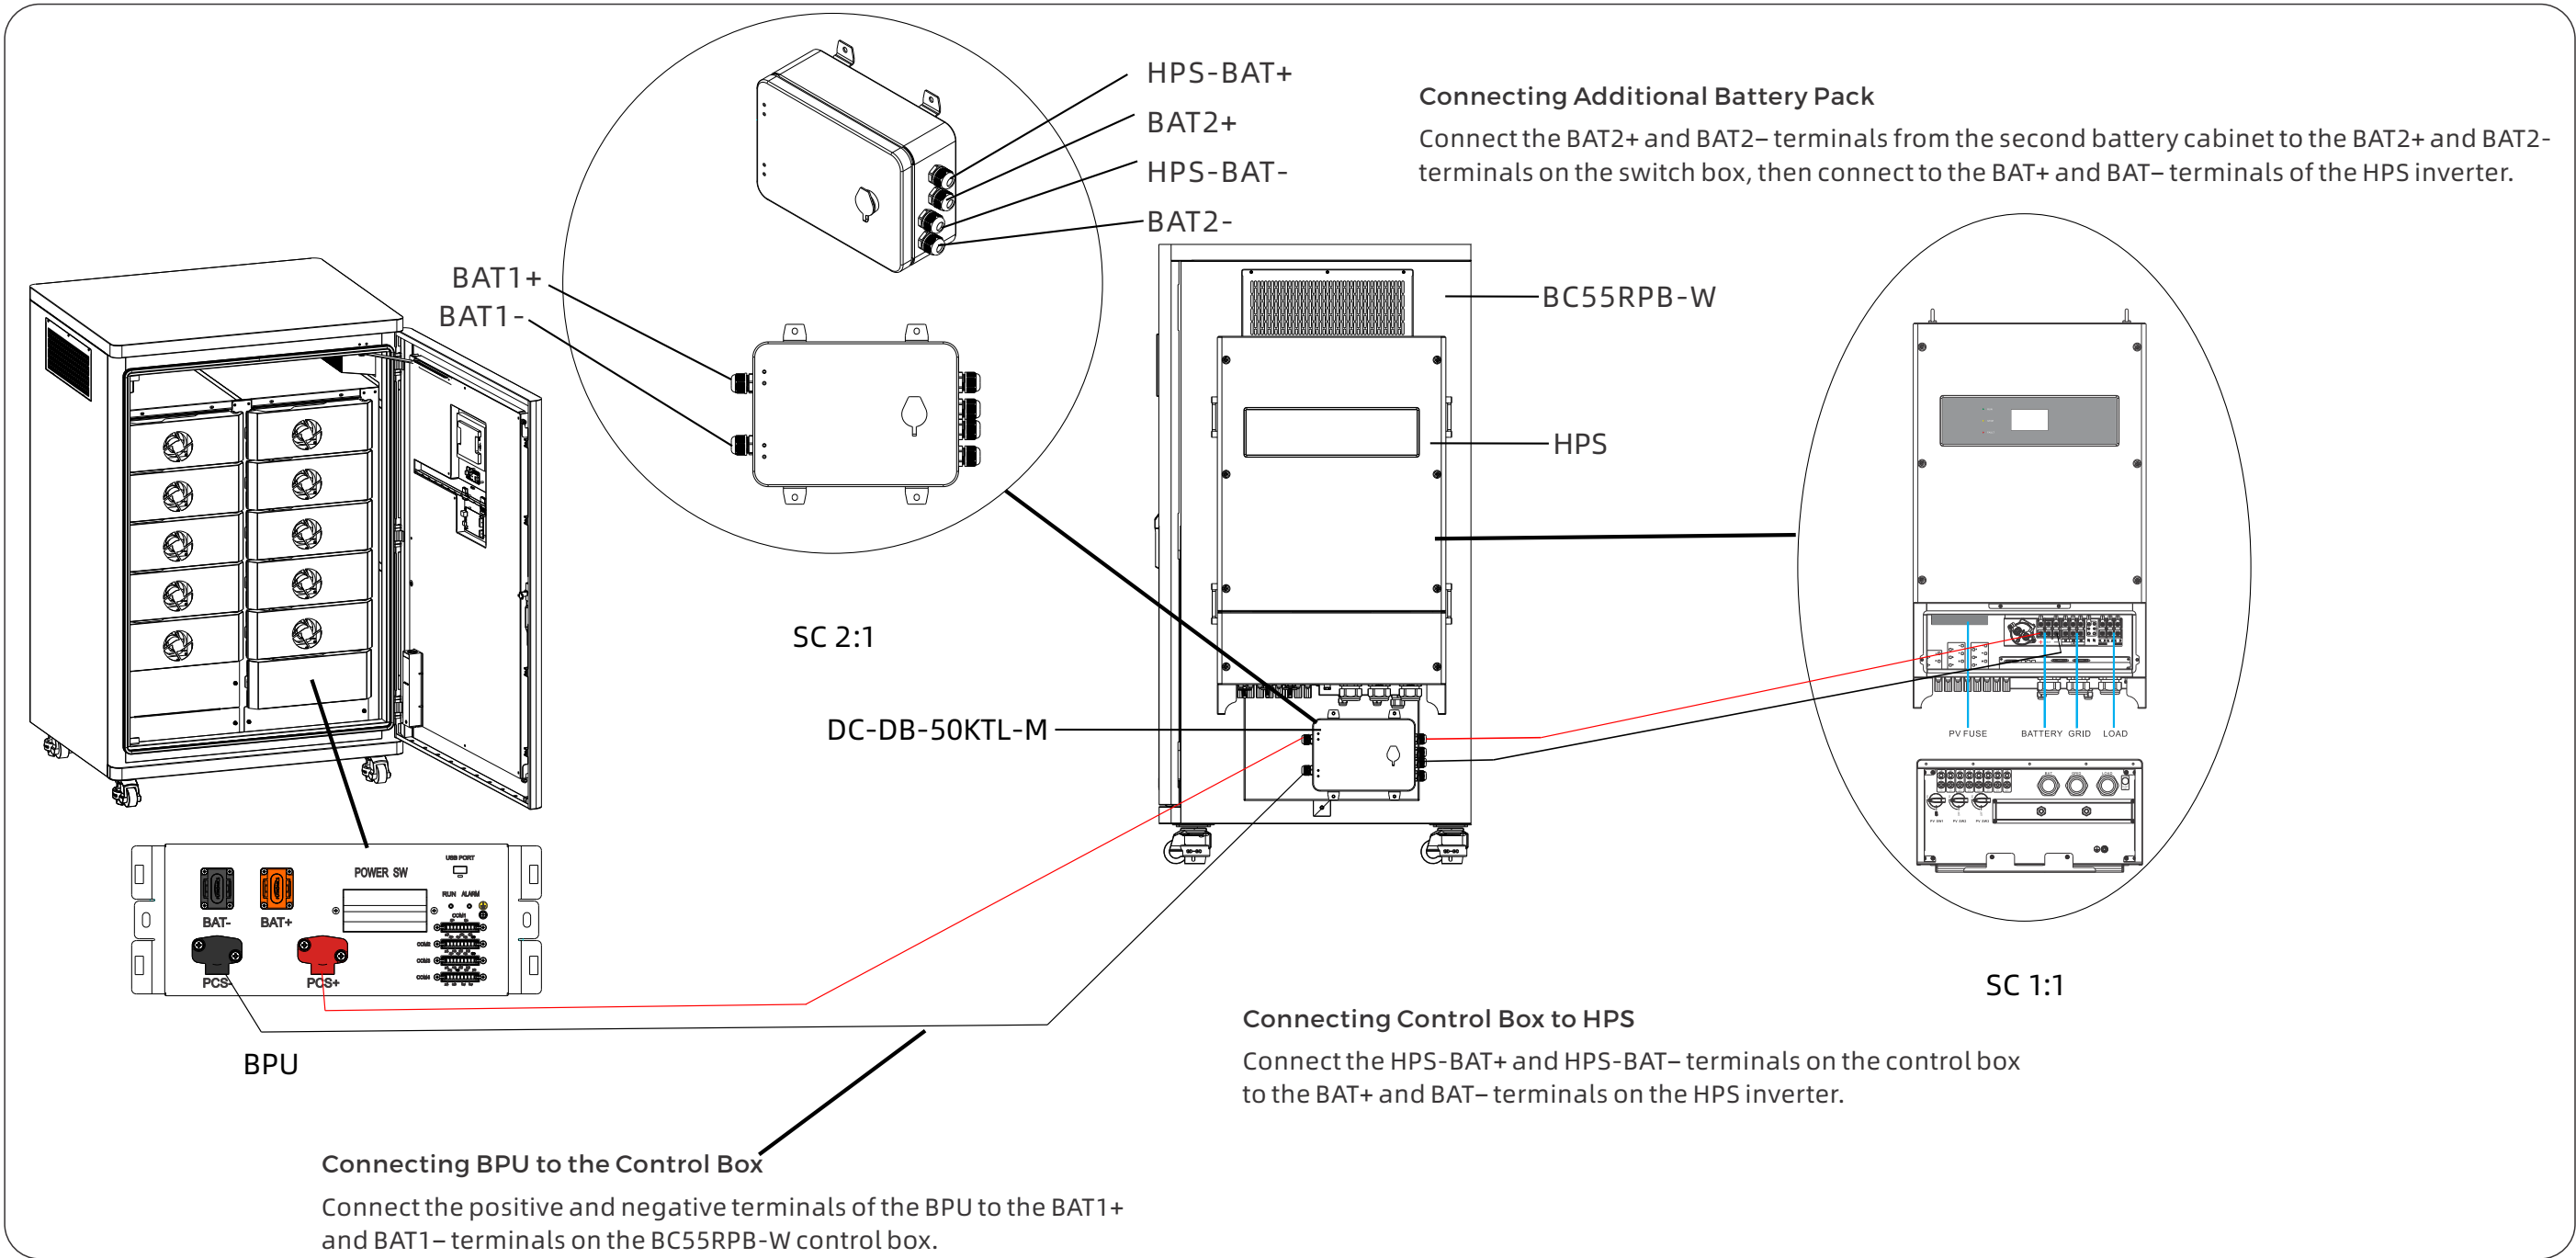

## 3. Wiring Logic

