



SHENZHEN ATESS POWER TECHNOLOGY CO.,LTD

GROWATT-ATESS Industrial Park, No.23 Zhulongtian Road, Shuitian Community,
Shiyan Street, Baoan District, Shenzhen

Tel: +86 755 2998 8492

Web: www.atesspower.com

Email: info@atesspower.com

Revised date: 2024-11-12

ATESS PCS100/250/500/630/1000

**Bidirectional battery Inverter
User Manual**

Contents

1 About this Manual

- 1.1 Contents
- 1.2 Target readers
- 1.3 Symbols explanation

2 Safety Instructions

- 2.1 Instructions
- 2.2 Installation
- 2.3 Important notes

3 Product Description

- 3.1 Bi-directional Storage system
- 3.2 Circuit diagram of the inverter
- 3.3 The layout of the main components
- 3.4 Operation mode
- 3.5 Dimensions and weight
- 3.6 Packaging information

4 Transportation and Storage

- 4.1 Transportation
- 4.2 Inspection and storage

5 Installation

- 5.1 Installation condition requirements
- 5.2 Tools and spare parts required for whole machine installation
- 5.3 Mechanical installation
- 5.4 Electrical installation
- 5.5 Communication
- 5.6 Connection with DG dry contact
- 5.7 Connect with communication

6 Pilot Operation

- 6.1 Inspection
- 6.2 Power on

7 GUI instruction

- 7.1 LCD display screen introduction
- 7.2 LCD operation
- 7.3 LCD display information schedule

8 Operation

- 8.1 Power on steps
- 8.2 Pilot operation completion
- 8.3 Power off steps

9 Routine Maintenance

- 9.1 Regular maintenance
- 9.2 Waste disposal

10 Appendix

- 10.1 Specification
- 10.2 ATESS Factory warranty
- 10.3 Maintenance and inspection checklist for running system
- 10.4 Maintenance and inspection checklist for shutdown system

1 Introduction

1.1 Contents

This manual will provide detailed product information and installation instructions for users of the ATESS PCS series energy storage integrated inverter (hereinafter referred to as inverter) of Shenzhen ATESS power Technology Co., Ltd. (hereinafter referred to as ATESS). Please read this manual carefully before using the product and store it in a place convenient for installation, operation and maintenance. Users will not be informed of any modification of this manual by ATESS. The contents of the manual will be updated and revised constantly, and it is inevitable that there is a slight discrepancy or error between the manual and the real product, Please refer to the actual products that you have purchased. Users should contact their local distributors or log in to our website: www.atesspower.com to download and obtain the latest version of the manual.

1.2 Target readers







Qualification:

- Only professional electricians certified by relevant departments can install this product.
- The operator should be fully familiar with the structure and working principle of the entire energy storage system.
- The operator should be fully familiar with this manual.

The operator should be fully familiar with the local standards of the project.

1.3 Symbols

In order to ensure the personal and property safety of the user during installation, or optimally efficient use of this product, symbols are used highlight the information. The following symbols may be used in this manual, please read carefully, in order to make better use of this manual.

	<p>DANGER</p> <p>DANGER indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.</p>
	<p>CAUTION</p> <p>CAUTION indicates there is potential risk, if not avoided, could result in equipment malfunction and property damage.</p>
	<p>Caution, risk of electric shock</p> <p>When battery bank connecting point are exposed, there will be DC voltage in the equipment DC side; and when output breaker is on, there is a potential risk of electric shock.</p>
	<p>Caution, risk of fire hazard</p> <p>Suitable for mounting on concrete or other non-combustible surface only.</p>
	<p>Protective conductor terminal</p> <p>The inverter has to be firmly grounded to ensure the safety of personnel.</p>
	<p>Risk of electric shock, Energy storage timed discharge</p> <p>Electrical shock danger exists in the capacitor; the cover shall be moved at least 5 minutes later after all powers are disconnected.</p>

2 Safety Instructions

2.1 Notice for use

Inverter installation and service personnel must be trained and familiar with the general safety requirement when working on electrical equipment. Installation and service personnel should also be familiar with the local laws and regulations and safety requirements.

- Read this manual carefully before operation. The equipment will not be under warranty if failing to operate according to this manual.
- Operation on the inverter must be for qualified electrical technician only.
- When inverter operating, don't touch any electrical parts except for the touch-screen.
- All electrical operation must comply with local electrical operation standards.
- Permission from the local utility company is required before installing the energy storage system and only professional personnel are qualified for the operation.

2.2 Installation

Proper installation requires following all the instructions in the user manual involving transportation, mounting, wiring and commissioning. ATESS does not cover warranty for the inverter damage due to failing to use it properly.

The protection level of the inverter is IP20, which is designed for indoor installation.

Please refer to chapter 5 for installation instruction.

Other notice for using the inverter:

- Pay attention to the safety instructions listed here and below
- Pay attention to the user manual of energy storage controller
- Technical data related to equipment shall be considered.

2.3 Important note



Item 1: Static electricity can cause damage to the inverter electrostatic discharge may cause unrecoverable damage to inverter internal components!

When operating the inverter, operator must comply with anti-static protection norms!

Item 2: Restriction

The inverter cannot be directly used to connect the life support equipment and medical equipment!

Item 3: Precautions

Make sure installation tools or other unnecessary items are not left inside the inverter before starting up.


Item 4: Maintenance notice

Maintenance can only be carried out after the inverter totally discharged.

Product Description 3

3.1 Bi-directional energy storage inverter

1. PCS series energy storage controller produced by ATESS is a bidirectional battery inverter. Its main function is to store the energy of power grid / oil engine to the battery, or release the stored energy to the power grid or supply load.2. The energy storage controller and bypass cabinet can realize seamless switching off the grid and ensure uninterrupted load supply. If it is not equipped with bypass cabinet, it is impossible to carry out parallel and off grid seamless switching, and only pure grid connection or pure off grid mode can be operated.3. At the same time, it can be combined with PBD (photovoltaic DC converter) to charge photovoltaic energy into the battery or output it through inverter of energy storage controller.

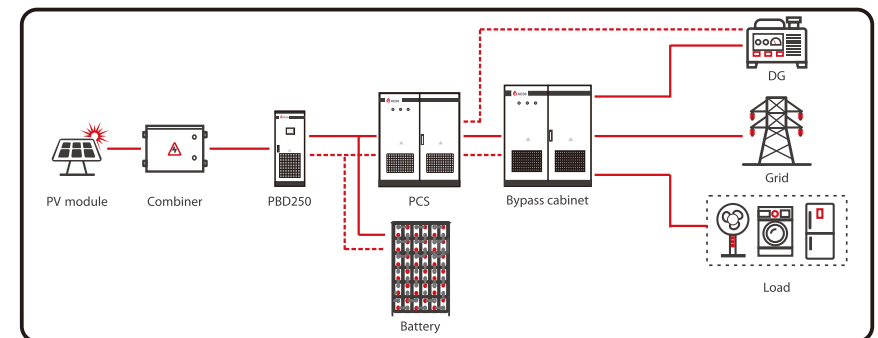


PBD+PCS+bypass system diagram

System Description:

PBD: Photovoltaic DC converter, photovoltaic DC input, and then DC output to charge the battery, or inverter output through the energy storage controller to supply load or power grid.

Bypass: The bypass cabinet can be connected to photovoltaic grid connected inverter (to be matched with PCs), energy storage controller, load, power grid and oil engine. Main functions: AC confluence, parallel off grid switching in cooperation with energy storage controller, and automatic switching of power grid oil engine.

3.2 Circuit diagram of the inverter

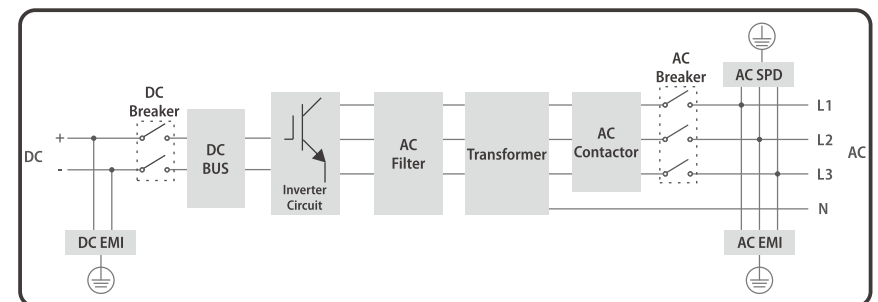

3.3 The layout of the main components

3.3.1 External components

The main external components of the energy storage controller include: LED indicator, LCD touch screen, off-on knob, emergency stop button and other parts.

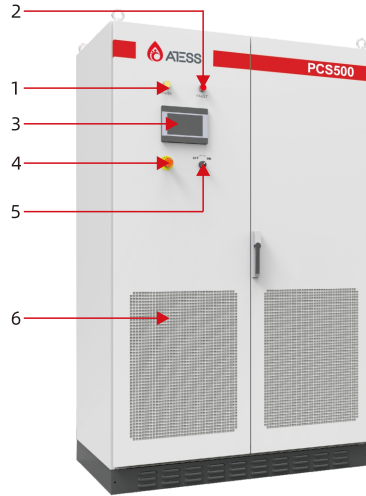


Figure 3-3-1-1 Inverter appearance

No.	Name	Description
1	Power indicator	When power supply is normal, the indicator displays yellow.
2	Inverter malfunction indicator	When inverter is faulty, the indicator displays red.
3	touch Screen LCD	Operation information display, receive control command and parameters setting
4	Emergency STOP	Shut down the inverter when pressed down
5	Off-on knob	only control the grid-side switch, and does not control the DC-side switch
6	Dust screen	prevent dust from entering into the inverter

Figure 3-3-1 Part description

Indicator

There are two LED indicators on the inverter which is used to display the current status of the inverter.



Figure 3-3-1-2 LED indicators

Emergency STOP



The emergency stop button is only used in case of emergency, such as: serious failure in the grid, fire, etc.



Figure 3-3-1-3 Emergency STOP

The emergency stop button immediately disconnects the inverter from both grid and battery, which ensure the safety of the inverter. By pressing the emergency stop button, the device will be locked in the "off" position. Only release the emergency stop button by rotating it clockwise and closing AC, DC breaker, can the inverter resume working normally.

Off-on knob

It is used to start or stop the inverter.



Figure 3-3-1-4 Off-on knob

Touch screen

It displays the inverter's operating parameters, power generation, and faulty information record. Please refer to Section 6, for details.


3.3.2 Components at the front

The main components of PCB and AC power supply circuit breaker include lightning protection switch, AC power supply circuit breaker, etc. The layout of different models is different, not all of them can be displayed here, which does not mean that there is no such part.

3.3.2.1 PCS100 main parts overview

NO	Name	Description
1	IGBT module	Power module
2	Capacitance	DC bus capacitance
3	DC main relay	DC main relay
4	Aluminum shell resistance 1	DC soft start resistance
5	Aluminum shell resistance 2	DC bus discharge resistance
6	Battery circuit breaker	Control the connection of battery and PCS
7	DC lightning protection	DC lightning protection
8	Terminal block	Terminal block connecting with bypass cabinet
9	Interface board	Power supply convert PCB
10	Control board	Control board
11	Sampling board	PCB that samples voltage, current and temperature
12	DG dry contact	Control running of DG
13	AC power supply microbreaker	AC power supply microbreaker
14	AC circuit breaker	Control AC connection with PCS
15	N terminal	N terminal connected with bypass cabinet
16	AC lightning protection and lightning protection switch	AC lightning protection and lightning protection switch
17	PE terminal	Grounding copper bar

Table-PCS100 main parts overview

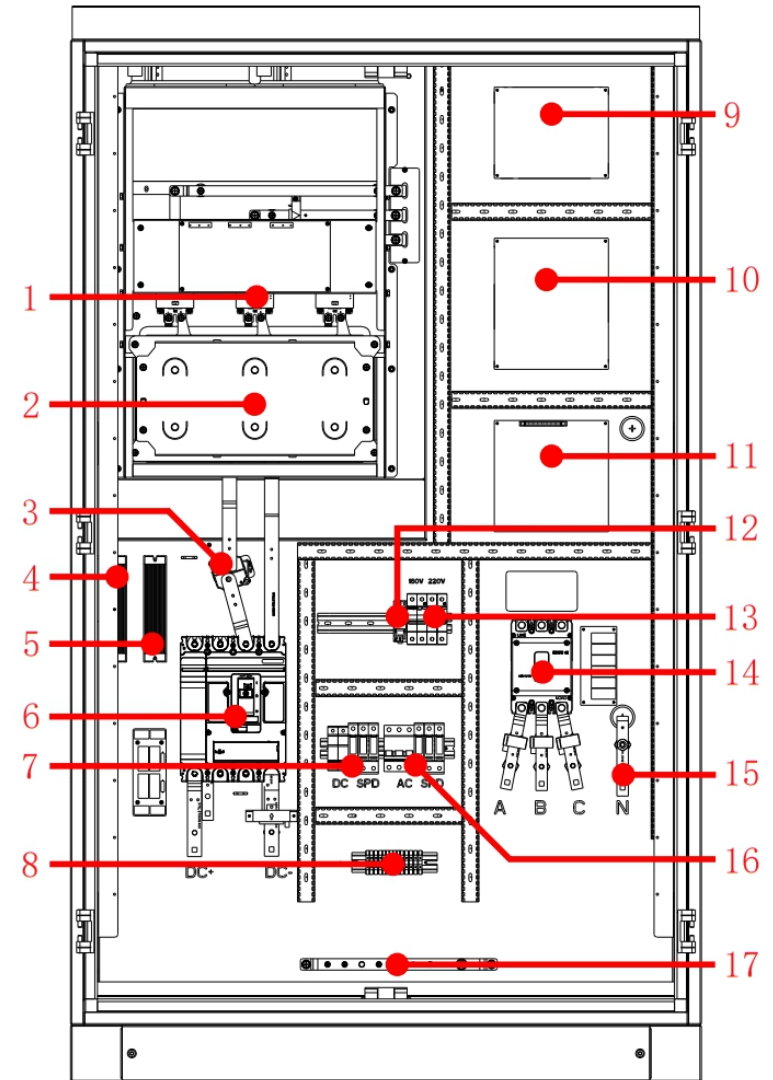


PCS100 main parts overview

3.3.2.2 PCS250 main parts overview

NO	Name	Description
1	Aluminum shell resistance 1	DC bus discharge resistance
2	DC main relay	DC main relay
3	DC auxiliary relay	DC auxiliary relay
4	Capacitance	DC bus capacitance
5	DG dry contact	Control running of DG
6	Terminal block	Terminal block connecting with bypass cabinet
7	Battery circuit breaker	Control the connection of battery and PCS
8	AC lightning protection and lightning protection switch	AC lightning protection and lightning protection switch
9	AC circuit breaker	Control AC connection with PCS
10	PE terminal	Grounding copper bar
11	N terminal	N terminal connected with bypass cabinet
12	Rectifying board	DC power supply and AC/DC power supply PCB
13	Interface board	Power supply convert PCB
14	AC power supply microbreaker	AC power supply microbreaker
15	Control board	Control board
16	Mingwei power	Power supply module
17	Sampling board	PCB that samples voltage, current and temperature
18	BUCK board	DC Power supply PCB
19	Transformer	Isolated transformer

Table-PCS250 main parts overview

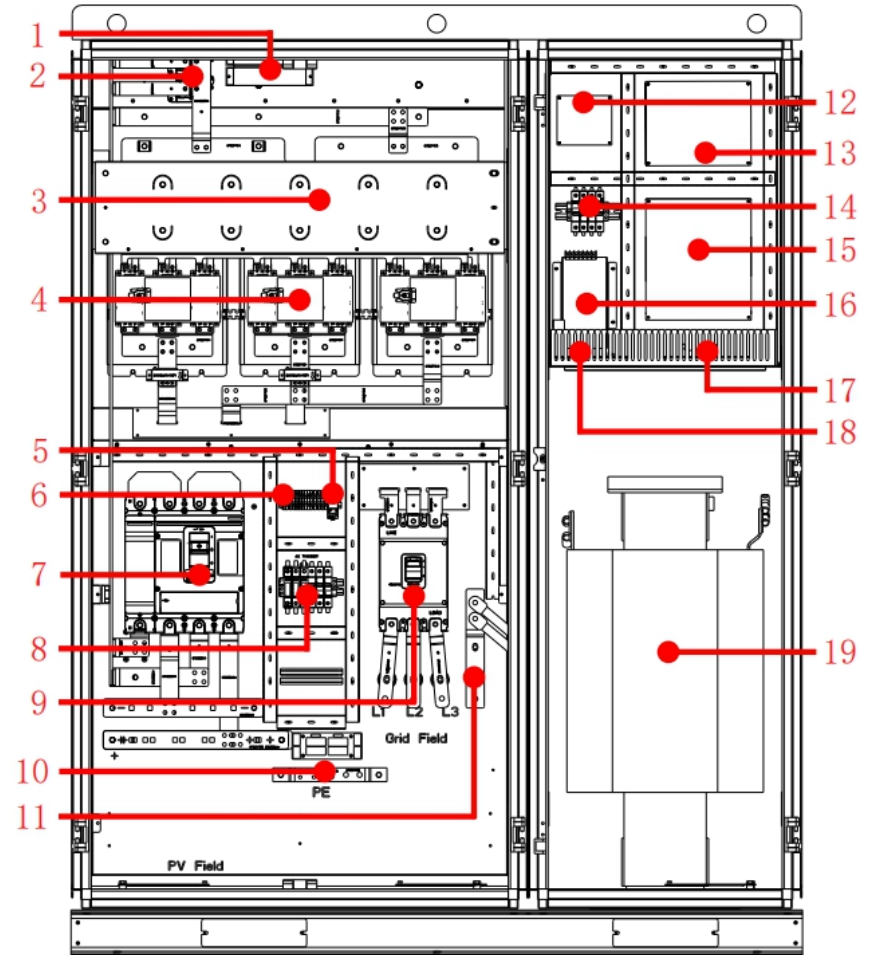


PCS250 main parts overview

3.3.2.3 PCS500 main parts overview

NO	Name	Description
1	Capacitance	DC bus capacitance
2	IGBT module	Power module
3	Sampling board	PCB that samples voltage, current and temperature
4	Control board	Control board
5	Interface board	Power supply convert PCB
6	DC main relay	DC main relay
7	DC auxiliary relay	DC auxiliary relay
8	Battery circuit breaker	Control the connection of battery and PCS
9	Terminal block	Terminal block connecting with bypass cabinet
10	DG dry contact	Control running of DG
11	PE terminal	Grounding copper bar
12	BUCK board	DC Power supply PCB
13	Rectifying board	DC power supply and AC/DC power supply PCB
14	Mingwei power	Power supply module
15	AC circuit breaker	Control AC connection with PCS
16	AC lightning protection and lightning protection switch	AC lightning protection and lightning protection switch
17	AC power supply microbreaker	AC power supply microbreaker

Table-PCS500 main parts overview

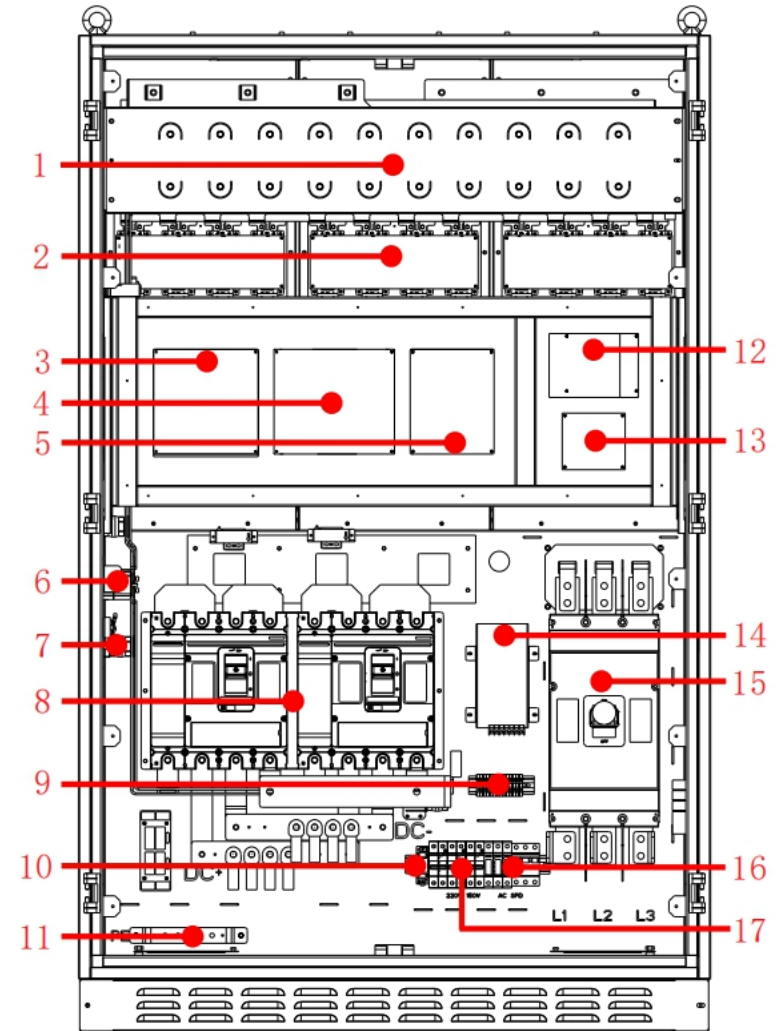


PCS500 main parts overview

3.3.2.4 PCS630 main parts overview

NO	Name	Description																		
1	Capacitance	DC bus capacitance																		
2	IGBT module	Power module																		
3	Sampling board	PCB that samples voltage, current and temperature																		
4	Control board	Control board																		
5	Interface board	Power supply convert PCB																		
6	DC main relay	DC main relay																		
7	Aluminum shell resistance	Soft start resistance																		
8	Battery circuit breaker	Control the connection of battery and PCS																		
9	AC power supply microbreaker	AC power supply microbreaker																		
10	BUCK board	DC Power supply PCB																		
11	Rectifying board	DC power supply and AC/DC power supply PCB	12	Mingwei power	Power supply module	13	AC circuit breaker	Control AC connection with PCS	14	AC lightning protection and lightning protection switch	AC lightning protection and lightning protection switch	15	Terminal block	Terminal block connecting with bypass cabinet	16	DG dry contact	Control running of DG	17	PE terminal	Grounding copper bar
12	Mingwei power	Power supply module																		
13	AC circuit breaker	Control AC connection with PCS																		
14	AC lightning protection and lightning protection switch	AC lightning protection and lightning protection switch																		
15	Terminal block	Terminal block connecting with bypass cabinet																		
16	DG dry contact	Control running of DG																		
17	PE terminal	Grounding copper bar																		

Table-PCS630 main parts overview

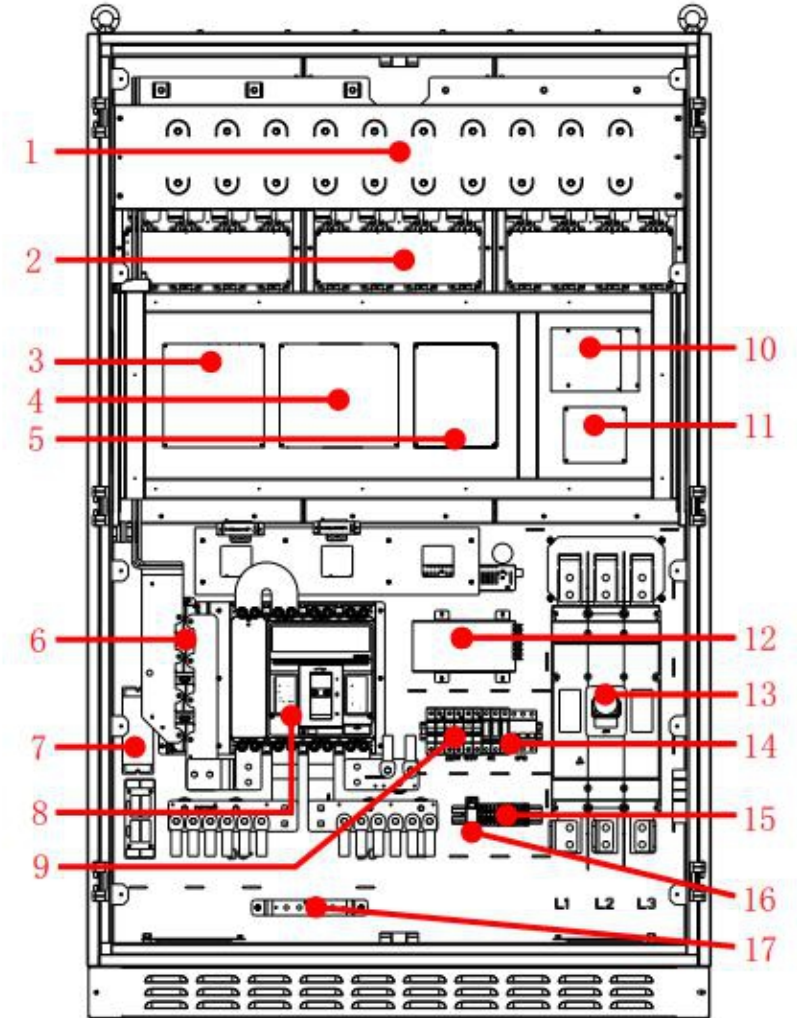


PCS630 main parts overview

3.3.2.5 PCS1000 main parts overview

NO	Name	Description
1	Capacitance	DC bus capacitance
2	IGBT module	IGBT module Power module
3	Sampling board	PCB that samples voltage, current and temperature
4	IO and Control board	Control board and Power supply
5	Connect board	PCB that Component port control
6	AC fan	IGBT module heat dissipation
7	DC fan	Balance inductance heat dissipation
8	DC main relay	DC main relay
9	DC auxiliary relay	DC auxiliary relay
10	Battery circuit breaker	Control the connection of battery and PCS
11	DC BUS capacitance Board	Stability BUS Voltage
12	AC/DC power supply microbreak	AC/DC power supply micro breaker
13	BUCK board	DC Power supply PCB
14	Rectifying board	DC power supply and AC/DC power supply PCB
15	Mingwei power	Power supply module
16	Capacitance	200V Energy-storage Capacitance
17	AC circuit breaker	Control AC connection with PCS
18	AC lightning protection and lightning protection switch	AC lightning protection and lightning protection switch
19	Terminal block	Terminal block connecting with bypass cabinet
20	DG dry contact	Control running of DG
21	N terminal	Connect N terminal of the transformer and bypass cabinet
22	PE terminal	Grounding copper bar

Table-PCS1000 main parts overview

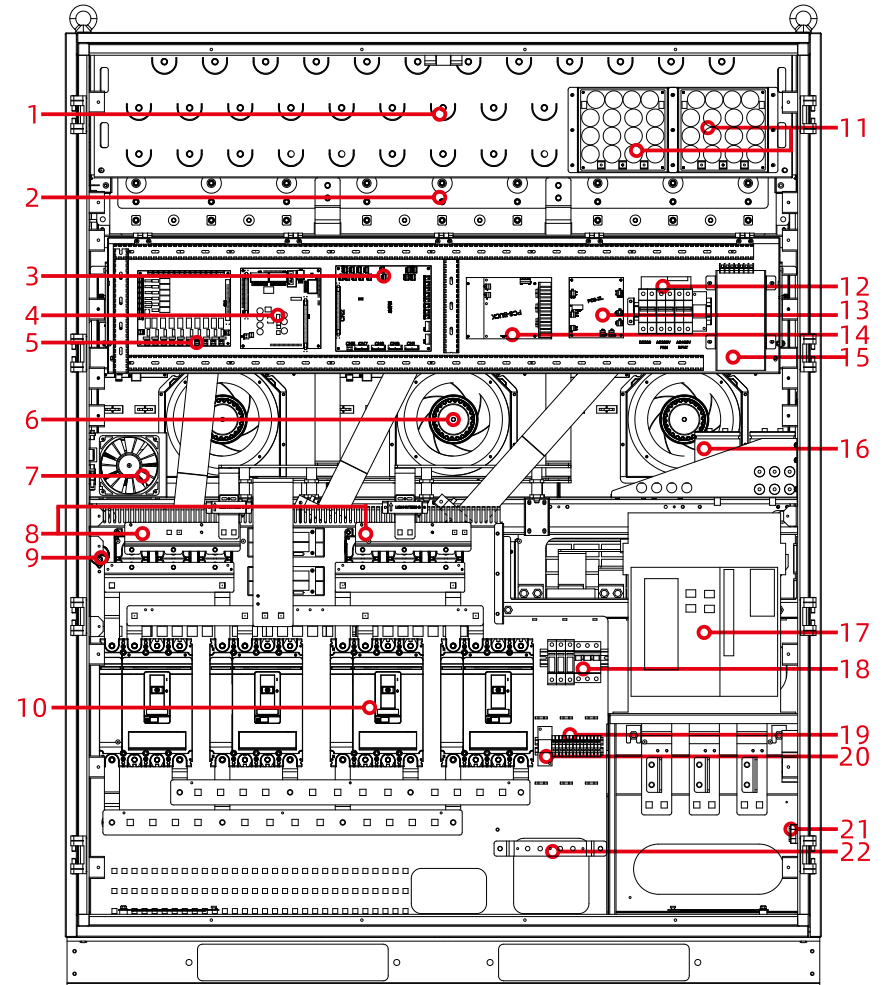


PCS1000 main parts overview

3.4. Operation mode

1. Please read chapter 7.2.4 for the setting method of operation mode, and set the operation mode on the screen.

2. The PCS needs to be used with bypass cabinet by default. If not, it can only operate in pure on-grid mode or pure off-grid mode, automatic on/off grid switching cannot be carried out.

3. Because the bypass cabinet can be connected to the PV grid connected inverter, which is equivalent to PBD and regarded as PV energy, hereinafter referred to as PV. If PBD and PV grid connected inverter are not connected, it is considered as insufficient PV.

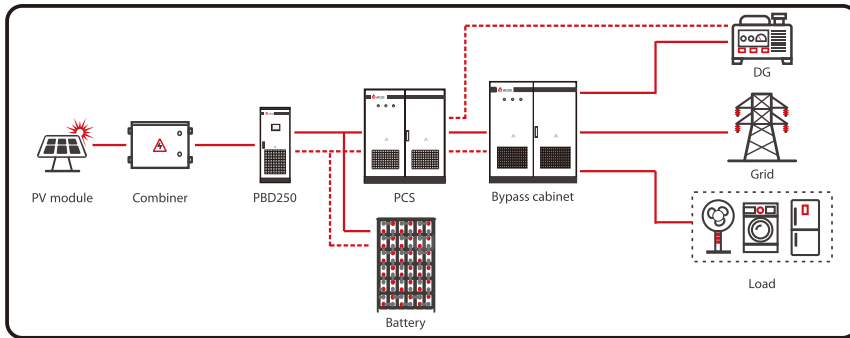

System diagram

3.4.1 ON-grid charge and discharge mode

Functions optional in on-grid modes

Anti-reflux (default enable is 0)

When set to 1, enable the anti countercurrent function;

When set to 0, the anti-reflux function is disabled.

1. In case of reverse current prevention, it is forbidden to feed power to the power grid.
2. When the reflux is not prevented, the residual power can feed to the power grid.
3. In DG mode, the anti-reflux function is turned on by default and cannot be closed.

Simultaneous charging enable (default enable is 1)

1. When set to 1, the grid or DG can charge the battery at the same time as the PV.
2. When it is set to 0, the PV will charge the battery first, and the grid or DG will not charge the battery. Power grid or DG can be allowed to supply power when there is no PV battery charging.

Please read chapter 7.2.4 for setting method.

3.4.1.1 Load priority mode

1. When the PV energy is sufficient, PV will supply the load first, and the remaining electricity will be charged to the battery.

2. When the PV power cannot fulfill the load, the battery will discharge automatically. If the battery discharges to the stop discharge set point, the battery will stop discharging and the load will be powered by PV and the grid. In order to protect the battery, the battery will be charged with a small current. When the battery is charged to a recoverable discharge state, the discharge will be resumed.

Stop discharging set point: discharge cut-off voltage, discharge cut-off SOC, see Chapter 7.2.4 for details

Recover discharging set point: Battery saturation and recovery discharge SOC. See Chapter 7.2.4 for details

3.4.1.2 Battery priority mode

1. When the PV energy is sufficient, charge battery first and supply the remaining power to the load;

2. When the PV energy is insufficient, the PV charge the battery first, the load is supplied by the power grid, and the power grid charges the battery at the same time;

3. If the battery is not discharged in the battery priority mode or switched to other modes, in order to maintain the electrochemical activity of the battery, it will enter the battery discharge state after one week of current limiting charging, and the battery discharge power will be calculated according to the battery specification. (it will not discharge to the power grid when anti-reflux).

3.4.1.3 Economic mode

The period of economic mode is divided into peak period, fair period and valley period. Please refer to section 7.2.4 for the setting details.

1. Valley period: working logic is the same to the battery priority mode's.

2. Fair period:

A) When PV energy is sufficient, PV is preferentially used for load, and the residual energy to charge the battery;

B) When PV energy is insufficient, PV and power grid jointly supply load without charging the battery;

C) The battery supply the load without discharging.

3. Peak period:

A) The grid does not charge the battery;

B) When PV energy is sufficient, PV shall supply the load first and the battery shall be charged.

C) When PV energy is insufficient, there are two cases:

(1) If the battery state does not reach the stop discharging set point, PV and battery supply for load.

(2) When the battery state reaches the stop discharging set point, the battery does not discharge, PV and power grid jointly supply the load without charging the battery.

3.4.1.4 Time shifting mode

1. Peak period: There are five time periods on the screen, and the corresponding discharge power value (KW) can be set for each time period. When reaches the set time, it will discharge automatically based on the set value.

2. Fair period: the screen can be set for 5 time periods, and the battery will not be charged or discharged during the set time period.

3. Valley period: the screen can be set for 5 periods, and the corresponding charging power value (KW) can be set for each period. When reaches the set time, it will discharge automatically based on the set value.

4. Time segments cannot overlap or be omitted.

5. For details about how to set a time range, see 7.2.4.

3.4.1.5 EMS mode

Description:

1. In EMS mode, the PCS is controlled by EMS management system and has no operation logic itself, and the power is controlled by EMS command;

2. The power transmitted under EMS mode is still limited by the screen setting value;

3. It needs to be used with EMS;

3.4.2 Off-grid mode

1. When there is no power grid or the DG is connected, the PCS will automatically switch to off grid mode.

2. In off grid mode, when the PV energy is sufficient, the PV will power the load first and charge the battery.

3. In off grid mode, when PV energy is insufficient, the battery will automatically discharge and supply the load.

4. When the power grid or DG is restored, the inverter will automatically switch to on-grid mode or DG mode.

3.4.3 DG mode

1. In off grid mode, if the inverter is connected to the DG and the DG enable is set to 1,

when the battery discharges to the stop discharge setting point, the inverter sends a dry contact signal to start the DG. After the DG is successfully connected, it enters DG mode. Now the DG supplies power to the load; Meanwhile, the inverter stops supplying power to the load and only charges the battery.

2. When the battery reaches the preset point of stopping DG, the inverter will stop the dry contact signal, the DG will be switched off and inverter will switch to off-grid mode.

● Start the DG set point: SOC lower limit, discharge cut-off voltage, see Chapter 7.2.4 for details

● Turn off the DG set point: SOC upper limit, floating charge current limit point settings. See Chapter 7.2.4 for details.

3.4.4 PV charge

1. In off-network mode and PBD is connected to the system, when the battery discharges to the stop discharging set point and no power grid or DG is connected, the battery continues to discharge to the undervoltage alarm point and enters the PV charge mode.

2. In PV charge mode, the PCS stops AC output and only keeps the PBD charging the battery.

3. In PV charge mode, the PBD continues to charge, and the battery state returns to the setting point of "PV charge to off-grid", and automatically switches to off-grid mode.

4. In PV charge mode, when the power grid/DG is connected, immediately exit the PV charge mode and enter the grid-connected/DG mode.

3.4.5 Fault mode

When the inverter fails, the contactor on AC and DC sides will immediately disconnect and shut down the inverter, so as to ensure the system safety. At this time, the inverter will continuously monitor whether the fault is eliminated, If not, it will maintain the fault state; after eliminated, it will restart automatically.

3.4.6 Permanent failure mode

When the inverter has a serious fault, the contactor on AC and DC sides will immediately disconnect and enter a permanent fault state to ensure safety of the system. When permanent fault is detected three times in a row, all switches will be disconnected. For example, the IGBT module of the inverter is faulty. When inverter enters this permanent failure mode, please do not repair it without permission. You should contact the personnel of the local dealer or call ATESS for help.

3.5 Dimensions and weight

Model	PCS100	PCS250	PCS500	PCS630	PCS1000
Dimension (W*H*Dmm)	1100/1890/850	1600/2080/850	1200/1900/800		1510/1900/850
Weight(KG)	820	1465	900	950	1500

Figure--Net Dimensions and weight of PCS

3.7 Packing information

NO	Name	Unit	Qty.	Note
1	PCS	unit	1	Key included
2	User manual	pcs	1	
3	Certificate	pcs	1	
4	Factory test report	pcs	1	
5	Accessories	pcs	1	Communication lines etc.

Figure--Packing information

4.1 Transportation

Transportation should follow the transportation methods described in the user manual. The inverter's weight and center of gravity should be taken into account



Caution, risk of danger

During transportation, lifting equipment and personnel must be qualified. The inverter should be placed vertically and the inclination cannot be more than 10 degrees. It is not allowed to place the inverter upside down or transport in a horizontal position. Incorrect lifting and transportation can lead to serious injury, property loss and damage to the inverter.

4.2 Inspection and storage

The inverter should be carefully checked before signing the document from the transportation company. Check the received items against delivery note, and if there is any defect or damage, immediately notify the transportation company. If necessary, you can seek help from ATESS Customer Service department.



Caution

ATESS PCS can only be stored when it is stopped and all the doors are closed in a dry room to protect the internal circuits against dust and moisture.

5 Installation

5.1 Installation condition requirements

To ensure normal operation of the machine, the installation environment is required as follows:

- The ingress protection of inverter is IP20. Moreover, as this product is an electronic equipment, it shall not be placed in humid environment.
- Install indoors and avoid sunlight and rain.
- Ventilation of the room shall be good.
- The installation environment shall be clean.
- As some noise will be produced in operation, this equipment shall be installed far from residential quarters.
- The installation ground shall be even enough, and firm enough to support the weight of inverter.
- The installation position shall be convenient for maintenance.
- Ambient temperature range: -25°C~55°C.
- Appropriate space shall be reserved for the machine to ensure ventilation and cooling.

We suggest inverter is installed in the distribution room. The floor, wall clearance, Ventilation equipment and precaution should be designed by professional personnel and satisfy the following requirements.

● Foundation requirement

Inverter is required to install on even ground with fire-retardant material as the surface or channel steel support structure, and sag or tilt ground is prohibited. The foundation shall be solid, safe and reliable. The foundation shall be capable of bearing the load of the inverter. Its load bearing ability shall be concerned throughout the installation place selection.


● Clearance space

During installation of the inverter, appropriate space shall be left to the wall or other equipment, in order to satisfy the requirements on narrowest maintenance channel, emergency access and ventilation.

In front of the installation place of inverter, a space of 0.8m or more shall be ensured, the back 0.8m or more, the top 0.8m or more to ensure easy installation, cooling and maintenance.

● Cable trench

The cable connection of inverter adopts bottom inlet and bottom outlet. Cable trenches are recommended to ensure easy installation and maintenance.

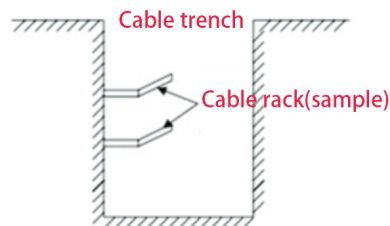

The cable trenches are often designed and constructed by the construction side based on relevant standards, with the equipment weight and dimensions required to be considered. Good electrical connection is needed between different cable trenches and GND terminals.

● Wiring specification

Cables in the inverter can be classified into either power cables or data cables. In cabling, the power cable shall be kept far away from, and the cable shall be kept in right angle at cross. The cable shall be as short as possible, and an appropriate distance shall be kept to the power cable. It is recommended that the insulation impedance of BT + and BT - at DC end to ground to be higher than 1m.

The power cable and data access shall be placed in different cable trenches respectively to avoid lengthy routing between the power cable and other cables, so as to reduce the electromagnetic interruption caused by sudden change of the output voltage. The distance among the power cable and data access shall be more than 0.2m. When the cables are crossed, the cross angle shall be 90 degrees, while the distance can be reduced appropriately.

● Ventilation requirement

In operation, inverter will produce a lot of heat. When ambient temperature is too high, the electrical property of the equipment may be affected, the equipment may even be damaged. Therefore, the heat release shall be fully considered in designing the control room to ensure operation of the equipment in high efficiency.

● Ventilation environment

To satisfy the ventilation requirement of inverter, its installation environment shall meet the following conditions:

- ※ Inverter shall be prevented from being installed in the place of poor ventilation condition and insufficient air flow;
- ※ The air inlet shall have enough air supplementation.

● Ventilation equipment

To ensure safe and reliable operation of the equipment, the ambient temperature must be within the permission range -25°C~ 55°C, therefore, appropriate ventilation devices must be equipped with to release the heat generated by the equipment.

1. There must be ventilation equipment inside the distribution room to ensure release of the waste heat generated by the inverter from the equipment, and allow for maximum ambient environment temperature. This can be realized from installation of exhaust devices;
2. Another fan can be added at the air duct outlet to exhaust the air out and ensure balanced pressure;
3. The direction of the air outlet shall be selected according to the local actual wind direction;
4. Pay attention to the dustproof measures and waterproof design at the air inlet and outlet;
5. If more air ducts are required, its dimensions shall be designed by the professionals according to the air output amount.

● Other protections

With IP20 of protection level, inverter is appropriate to be installed in dry and clean environment. Meanwhile, water leakage of the house shall be prevented, as it may damage the inverter. According to EMC requirement and noise level, the inverter shall be installed in industrial environment.

5.2 Tools and spare parts required for whole machine installation

Tools and spare parts required for installation is as follows:

Hoisting crane, forklift or fork lift truck (with the capacity for bearing the weight of the inverter)

- Torque wrench
- Screwdriver
- Wire stripper
- Terminal crimping machine
- Heat dryer
- Megger and multimeter

5.3 Mechanical installation

5.3.1 Transportation of packaged whole machine

This inverter is transported as an integrated unit, and the user can hoist it from the bottom with a forklift, or move it with a hoisting crane or crane.

Note 1: The inverter is integrated and cannot be dissembled either in transportation or installation. Any fault attributed to modification unauthorized by the ATESS is beyond the quality assurance.

Note 2: In movement, tilt, violent shake or sudden force upon the inverter shall be prevented, such as sudden down of lifting.

Note 3: Please read carefully the labeled parameters to select an appropriate transportation means and storage place.

We suggest the user make use of forklift to move the inverter if possible.



Before the inverter is moved to the designated place, we suggest to lay the DC input cable and AC main power supply cable. As these cables are relatively thick, they are hard to be cabled after the inverter is installed.

To keep the equipment in a better protective status, please adopt transportation with package as much as possible, and comply with the labels printed on the package in transportation:

Sign	Indication
	The gravity centre
	Lifting logo
	Face up to prohibit the inverter horizontally, tilted or upside down
	Handle with care, to avoid the transport environment too intense collision friction damage to the inverter
	Keep away from moisture

Inverters whose packages are not demolished can be moved with forklift, hoisting crane or crane. In moving, attention shall be paid to the weight painted on the package to ensure enough load capacity of the devices. As the gravity center of the equipment locates at the lower place symmetrical in front and back and left and right, the support point or hoisting point shall be arranged reasonably in transportation.

The forklift transportation is the standard one. The gravity center of the cabinet in transportation should locate between two forks of the forklift. The big-size inverter may block driver's sight, and it shall be treated with cooperation of the aid personnel.

5.3.2 Movement and installation of bare machine

● Demolish the package of inverter

Please demolish the packaged cabinet of the equipment according to the following procedures:

Procedure 1: Demolish the wood side and roof of the packaged cabinet

Procedure 2: Demolish the out-set package material on the machine

Procedure 3: Demolish the fastening screws between the machine and the pallet

- ① Demolish the front and back cover lids of the pedestal.
- ② Screw off the hold-down nuts at the bottom of the wood pallet.
- ③ Remove the screws, and the inverter will depart from the wood pallet.

● Movement and installation of bear machine

The inverter with demolished package can be moved with forklift, hoisting crane, slide rail or crane. If the package demolished place is far from the final installation place, it can be transported with forklift containing wood pallet.

If the wooden pallet at the bottom of the machine has been removed, when using the forklift, the front and rear cover plates of the base need to be removed first, and the center of gravity should be placed in the middle of the two forklifts, and then start lifting and transporting, as shown in the following figure:



Caution, risk of danger

We must act slowly and gently when transporting the inverter with forklift to avoid violent vibration of the inverter or collision with other objects.


If lifting method is used for moving, please pay attention to the lifting position, ensure that the lifting angle is 70°, and be cautious of the center of gravity position of the inverter.

NOTE:

- It is necessary to always pay attention to the position of the center of gravity of inverter.
- Take necessary auxiliary measures to ensure the safety of transportation personnel
- Take necessary auxiliary measures to ensure that the equipment is delivered to the final installation site.

5.4 Electrical installation

5.4.1 Input and output requirements



Caution, risk of danger

- There is a danger of electrical shock of high voltage in inverter's operation; only electricians of professional skills can operate.
- All connections with this equipment shall be done under non-voltage state.
- The inverter may be damaged if input or output terminal is incorrectly plugged. Failure of acting upon this information may cause serious personnel injury or significant property loss even to death.

● **Battery**

The PCS100 and PCS250 battery operating voltage is 500V- 820V. The battery voltage should be not lower than 500V and not higher than 820V; PCS500 and PCS630 battery operating voltage is 600V- 900V; PCS1000 battery operating voltage is 650V-860V. The battery voltage should be not lower than 650V and not higher than 860V.

● **PV module**

The maximum MPPT working voltage of PV module should not be more than 820v and the open circuit voltage should not exceed 1000V, otherwise the equipment will be in over-voltage protection state and cannot work normally. The MPPT voltage range of should be within 480v-800v, which means the minimum PV working voltage shall not be lower than 480v. And under the rated power, maximum working voltage shall not be higher than 800v.

● **PV and battery configuration**

The MPPT voltage shall be greater than the maximum voltage of the battery, otherwise, the battery cannot be fully charged by PV power. However, it is suggested that the voltage difference not be too large, or it will speed up the machine wearing and the reduce efficiency. The best configuration is that the voltage of MPPT is 100V higher than the maximum battery voltage.

● **Three phase grid connection**

The inverter will constantly detect whether the power grid meets the grid connection conditions. The grid connection requirements of various countries may be different. The protection parameters of the inverter can be set. For details, please refer to the local grid connection regulations. The power grid is a three-phase power grid. Plus, the installation shall be approved by the local power department.

Model	PCS100/250/500/630/1000
Grid voltage limit	360V-440V
Grid frequency limit	45Hz-55Hz/55Hz-65Hz

● **Cable requirements**

1. Please select the corresponding withstand voltage cable according to the voltage level.
2. Because different voltage will lead to change of current, please calculate the corresponding cable diameter according to the actual voltage range. The following table only provides the cable requirements of the lowest working voltage and rated power. In actual application, it should be calculated according to the actual voltage, please inquire the after-sales staff of ATESS if you need more details.

The cables should be calculated according to the actual voltage, or you could contact ATESS.

Cable	Requirements for bus diameter				
	PCS100	PCS250	PCS500	PCS630	PCS1000
Battery	70mm ²	95mm ² *2	95mm ² *3	95mm ² *4	150mm ² *4
AC output	70mm ²	70mm ² *2	95mm ² *3	95mm ² *4	150mm ² *4
N line	70mm ²	70mm ² *2	95mm ² *3	95mm ² *4	150mm ² *4
Ground line	The diameter of the ground cable should not be less than half of the cross-sectional area of the AC output cable				
Communication line	Shielding wire: ≥0.75nm				

5.4.2 DC side wiring



Caution, risk of danger

The positive and negative of the battery shall not be connected in reverse. A multimeter shall be used to determine the polarity first, and then connect into the corresponding input ends of the battery.

Specific procedures are as follows:

- 1) Cut off the distribution circuit breaker at the DC side, and ensure that no voltage on the wire at DC side.
- 2) Use a multimeter to measure the open circuit voltage of the battery to ensure that it is within the allowed range.
- 3) Determine the positive and negative pole of the battery with a multimeter.
- 4) Strip off the insulation skin at the end of the cable.
- 5) Crimp the wiring copper nose.
 1. Put the stripped copper core into the crimping hole of the copper nose.
 2. Use the terminal pressing machine to press the copper nose tightly. The number of crimping shall be more than two.
- 6) install the shrink fit sleeve.
 1. Select the heat shrinkable sleeve which is more consistent with the cable size, length is about 5cm.
 2. The heat shrinkable sleeve shall be sleeved on the copper nose of the wiring to completely cover the wire pressing hole of the copper nose.
 3. Use a heat blower to tighten the heat shrink sleeve.
- 7) Connect the positive of the battery to the "Battery input +" of DC input
 1. Select the bolts that match the copper nose.
 2. Connect the copper nose at both ends of the wiring firmly to the "battery input +" end of the inverter and the positive pole of the battery.
 3. Tighten the bolts with a screwdriver or wrench.
- 8) Connect the "battery input -" end of the inverter to the negative pole of the battery by cable according to the method of step 7.
- 9) Please be sure that all wiring are fastened.

5.4.3 AC side wiring



Caution, risk of danger

When connecting the AC grid, cut off the circuit breaker at the AC side to ensure that the AC wire connecting to terminals has no electricity.

The output voltage of the AC side of the inverter is 400V, which is connected to the power grid through a transformer. The wiring method of AC side and grid side is as follows:

- 1) Cut off the circuit breaker at AC side, to ensure that the AC wire connecting to terminals has no electricity. Confirm it with a multimeter.
- 2) Ensure that the wiring phase sequence at AC side is in consistent with the phase sequence at grid side.
- 3) Strip the insulation skin off at the end of the cable
- 4) Crimping copper nose
 1. Put the exposed copper core of the stripped wire head into the crimping hole of the copper nose.
 2. Use the terminal crimper to compress the copper nose of the wiring, and the number of crimping shall be more than two.
- 5) Install the shrink fit sleeve.
 1. Select the heat shrinkable sleeve which is more consistent with the cable size, length is about 5cm.
 2. The heat shrinkable sleeve shall be sleeved on the copper nose of the wiring to completely cover the wire pressing hole of the copper nose.
 3. Use a heat blower to tighten the heat shrink sleeve.
- 6) Connect "L1" cable to "L1" terminal on grid breaker or "L1" on PCS breaker of bypass cabinet. Select the bolts that match the copper nose.
- 7) Connect the AC output "L2" to the power grid switch "L2" or the PCS switch "L2" on the bypass cabinet (B (V) phase) as described in Step 6. Connect "L3" of AC output to power grid switch "L3" or PCS switch "L3" of bypass cabinet, namely C (W) phase; Connect N wire to the N bar on PCS. (The PCS500/630 transformer needs to be external, so there is no N bar inside the PCS, so connect the N of the transformer directly to the N bar of the bypass cabinet).

5.4.4 Earthing

Inverter must be earthing well for safety; Please make sure of the connection between PE in power distribution cabinet and PE copper in the inverter good; and make sure the earthing cable more than half of load cable, and earthing resistance is not lower than 4Ω.


All wiring into the channel at the bottom of the inverter to be all the wiring is completed, the connection port must be sealed with dust cotton, to prevent dust from entering the inside of the inverter.



Connect several connecting wires on the PE copper bar as some parts inside the energy storage controller need to be grounded, please do not change them without permission, so as to avoid electric shock

5.5 Communication

The PCS adopts various communication modes. The figure below is the diagram of the communication port of the control board on PCS100~630.


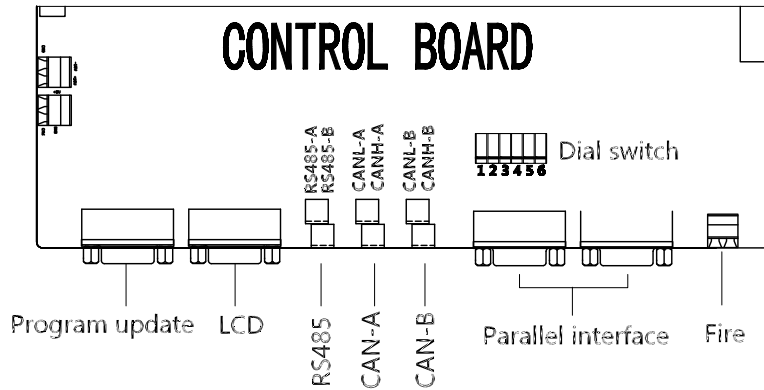


Description of dial switch:

The dial switch is a connection control switch with communication matching resistance (120 Ω). "On" indicates connection resistance and "off" indicates no connection with the resistance.

No.	Name	Description
1	485	485 matching resistance
2	CANA	CAN matching resistance
3	CANB	CAN matching resistance
4	M-S	Parallel matching resistance
5	ON-OFF	
6	MMS	

The PCS adopts various communication modes. The figure below is the diagram of the communication port of the control board on PCS1000.

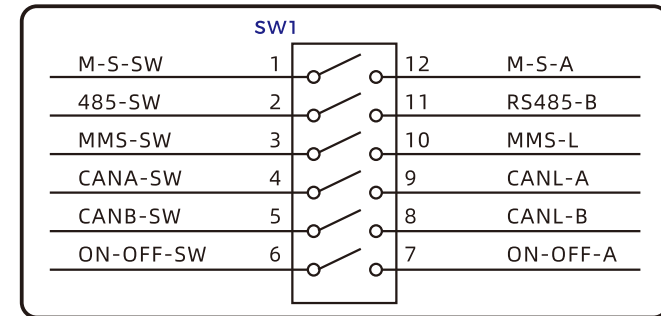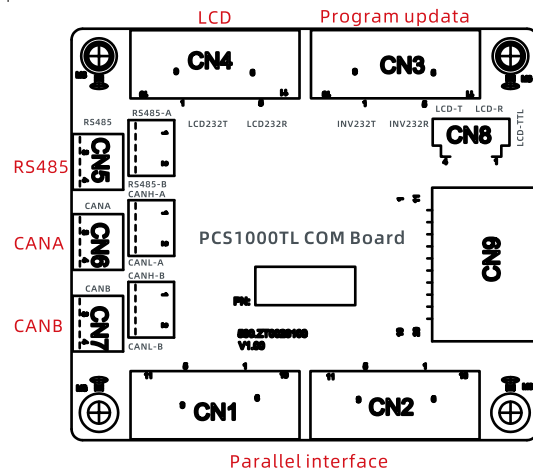


The DIP switch/DHN-06SM

No.	Name	Description
1	M-S	Parallel matching resistance
2	485	485 matching resistance
3	MMS	Parallel matching resistance
4	CANA	CANA matching resistance
5	CANB	CANB matching resistance
6	ON-OFF	Parallel matching resistance

1. RS485 communication

- Multiple inverters communicate with each other through RS485 line, and finally transmitted to the monitoring server through the Shinemaster / Enerlog via Ethernet, which can remotely monitor the operation status and data of single / multiple inverter(s) in real time. Both ends of the RS485 communication line are connected with terminals, and the terminals at both ends are connected in parallel. The length of the line shall not exceed 1000m. It is recommended to use a special shielded communication line.
- The RS485 interface of the inverter is located on the internal control board of the machine. Please distinguish "A" and "B". The wrong connection will lead to communication failure.
- If Shinemaster / Enerlog is not used for monitoring, the user's own monitoring equipment needs to be compatible with the RS485 communication protocol of ATESS.
- For the same 485 bus, only 120Ω matching resistance needs to be connected from end to end. Please set the dial switch according to the field installation.



2. BMS-CAN communication

- When the PCS works with battery with BMS management system, it needs to communicate with BMS through CAN communication. The CAN communication interface of BMS is connected to CAN-A interface of the PCS, communication can be realized after docking the communication protocol.
- Terminals are used at both ends of the CAN communication line. The terminals at both ends are connected in parallel to make the can communication line. It is recommended to use a special shielded communication line to reduce communication interference and improve the operation stability of the system.
- The CAN-A interface is on the internal control board of the inverter. Please distinguish between "L" and "H". Incorrect connection will lead to communication failure.
- If the user does not use the BMS battery system produced by ATESS, the user's own BMS battery system needs to be compatible with the BMS communication protocol of ATESS.
- For the same CAN bus, just connect 120Ω matching resistance from end to end. Please set the dial switch according to the field installation.

1. The communication connection between the bypass cabinet and PCS is divided into CAN communication and control communication. (See Section 5.5 for can communication connection).
2. Control communication connection method: Both the bypass cabinet and the PCS have a conversion terminal block (see section 3.3.2), and the bypass cabinet is provided with a butt harness. Connect according to the digital label.
3. PCS500/630 does not have a built-in transformer, so you need to connect an external transformer when it is used with a bypass cabinet. For specific connection methods, refer to the internal transformer wiring diagram of PCS500/630.

3. Bypass cabinet- CAN communication

- When the PCS is used with the bypass cabinet, it needs to communicate with each other. The Can communication port of the bypass cabinet is connected to the CAN-B interface on PCS. Note: Only the ATESS bypass cabinet can communicate with the PCS
- ATESS bypass cabinet comes with a dedicated communication line to communicate with the inverter which is directly connected to the CAN-B interface.
- The can-A interface is on the internal control board of the PCS. Please distinguish "L" and "H". Incorrect connection leads to failure of normal communication.
- For the same CAN bus, 120Ω matching resistance needs to be connected from end to end. Configure the dial switch according to the site installation.

4. PBD - CAN communication

- PCS is used with PBD and needs to communicate with it, and the CAN-B communication interface of PBD is connected to can-B of the PCS.
- PBD is in the same position as the communication interface of the PCS. Please distinguish "L" and "H". Incorrect connection leads to failure of normal communication.
- For the same CAN bus, 120Ω matching resistance needs to be connected from end to end. Configure the dial switch according to the site installation.

Parallel communication (parallel customized)


- When the same PCS models connect in parallel, the parallel communication line should be connected, which is supplied along with each PCS. The parallel ports of the two PCS are connected using the parallel communication line.
- The control board has two parallel ports, either one can be connected, the two ports are exactly the same.
- The dial switch 4, 5 and 6 should be switched to "ON" for the first and the last PCS in the parallel system .
 - When no other device is connected to the CAN-B bus in the system, the dial switch 3 of first and the last PCS in the parallel system must also be switched to "ON". If the bus is equipped with other devices, ensure that there are resistors at each end of the bus. Set the dial switch based on the site condition.



As Parallel function is a special customized function, please use it under the guidance of ATESS staff.

5.6 Diesel generator dry contact wiring

The inverter has a passive dry contact contactor to control the diesel generator, and the following is the dry contact structure diagram (initial state).

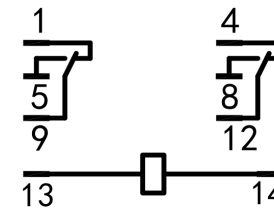


Wiring instructions:

1. "13" and "14" are the dry contact contactor power supply, which has been connected before delivery.
2. There are two groups of dry contacts: 1, 5, and 9 are a group, and 4, 8, and 12 are a group. The two groups work simultaneously.
3. The initial state is that when the PCS does not send the command to start the DG, the state between "1" and "9" is closed, and the state between "5" and "9" is open. When the PCS sends the command to start the DG, "1" and "9" are converted from closed to open, and "5" and "9" are converted from open to closed. "4" and "8" and "12" are the same.
4. When the current needs to pass through the dry contact, the AC voltage does not exceed 240V, the DC voltage does not exceed 28V, and the current does not exceed 5A.

5.7 Energy storage system wiring and communication wiring

5.7.1 Cable Connection with the Bypass Cabinet

When the PCS is used with the bypass cabinet, switching between on-grid and off-grid can be realized. PCS, Loads, PV inverters (INVs), Grid and Generator are connected to the bypass cabinet under the corresponding circuit breakers.

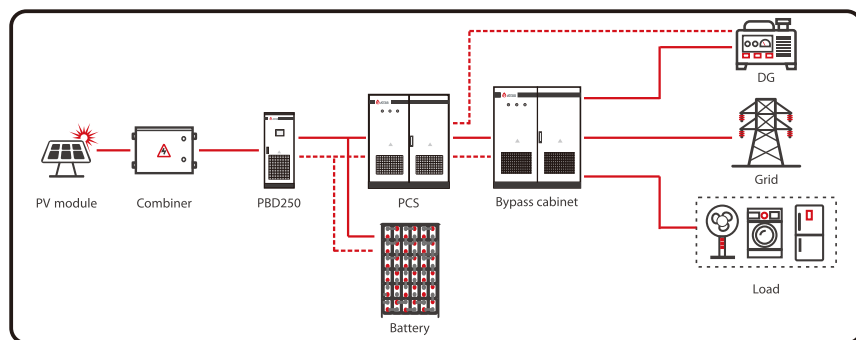

5.7.2 Wire connection of parallel system and CAN communication wire


● Parallel system:

1. The same PCS model is connected in parallel with the AC output supplying load at the same time, running in the same mode.
2. Parallel means when off-grid parallel, in which multiple PCS maintain the same AC frequency, amplitude and phase.

● System requirements:

1. The PCS must be of the same model.
2. To ensure the stable running of the system, ensure that the configurations of each machine are consistent.
3. The parallel system needs to communicate, so all devices must be installed in adjacent positions.

For example, the wiring diagram of the system with two parallel PCSs and four PBDs is as follows:

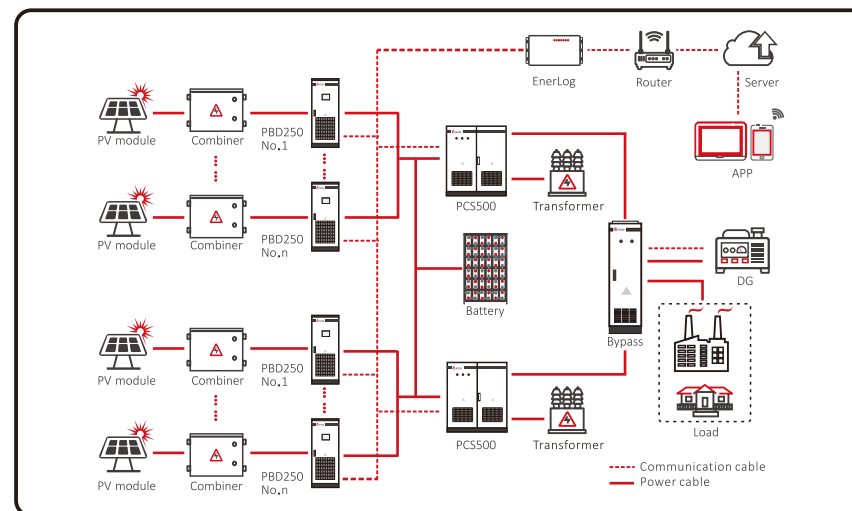

● Wiring instructions:

1. To reduce circulation loss, it is recommended to share batteries. If the shared battery is selected and the battery is equipped with BMS, all devices (PCS and PBD) need to communicate with the battery.
2. Multiple devices share power grid and DG. When automatic switching function of power grid /DG is required, it needs to be used with bypass cabinet.
3. The parallel system is equipped with dedicated communication ports and cables to connect the communication ports of parallel devices.
4. To ensure the communication quality, the devices must be installed in the same position to reduce the communication distance. The length of the communication cable we supply is 5 meters.
5. When multiple PCS are connected in parallel, the bypass cabinet can also work in parallel with multiple bypass cabinets. Each PCS is equipped with one bypass cabinet.
6. The length of the AC cable to the convergence point on each machine must be the same; otherwise, power distribution may be unbalanced.

● Working mode:

The working mode of the parallel system is the same as that of the single system, but the working mode of each device must be set to the same.

Redundancy is optional for parallel systems.

Description of redundancy function selection:

Redundancy can be selected only when one device fails and the other devices can still drive all the loads. Otherwise, the device will be overloaded.

Note: Parallel machine is a special function, standard machine may not be equipped with this function, please contact ATESS staff in advance if you need this function.

Installation requirements for parallel systems are high. Before installation, contact ATESS for installation and testing to ensure the correct operation of parallel systems.

6 Commissioning

6.1 Inspection before operation

Before the inverter is put into operation, its installation shall be inspected. At least two staff do the inspection according to the items listed below to ensure the correctness of the installation.

Inspection items for installation

- There is no deformation or damage to the inverter.
- Bottom of the inverter is fixed securely, the foundation support is stable and reliable.
- There is enough space around the inverter.
- The temperature, humidity and ventilation conditions of the environment where the inverter is located meet the requirements.
- There is enough cooling air for ventilation.
- Cabinet sealing protection is complete and reliable

Electrical inspection

- Inverter is grounded completely and firmly.
- The grid voltage matches the rated output voltage of the inverter.
- The phase sequence of grid connection is correct, and the tightening torque meets the requirements.
- The positive and negative poles of DC input connection are correct, and the tightening torque meets the requirements.
- Communication wiring shall be correct and keep a certain distance from other cables.
- Cable number is marked correctly and clearly.
- The insulation protection cover is complete and reliable, and the danger warning label is clear and firm.

Other inspection

- All useless conductive parts shall be tied with insulating ties.
- There are no tools, parts, conductive dust or other foreign matters left inside the cabinet.
- There is no condensation of moisture or ice in the cabinet

6.2 Power on steps

Energy storage controller adopts the integrated AC and DC power supply method, and LCD can be lit when there is AC or DC alone.

● Battery power supply

The battery can be used for the first time power-on. When the battery breaker is closed, the LCD should be on.

● AC power supply


AC power supply can be used for the first time power-on. Turn on AC input switch, bypass switch, AC output switch and the micro breaks, LCD should be on. When the energy storage controller is powered by AC, as long as the battery voltage is detected to be abnormal for more than 10 minutes, all circuit breakers except bypass will be switched off, and inverter won't be able to start and operate when powered by AC source alone. After LCD is lighted by AC power supply, the bypass switch must be off before the machine turns on.

It is recommended to use batteries to light up the screen. After power on, please do not switch the power-on knob immediately. Please check the historical information page and check whether the operation setting is in line with the actual situation. Please refer to Chapter 7 for details.

GUI Instruction 7

7.1 LCD display screen introduction

User can view the information of the inverter operation on the LCD touch screen, as well as setting the operating parameters. In order to facilitate the operation, a menu is provided below.

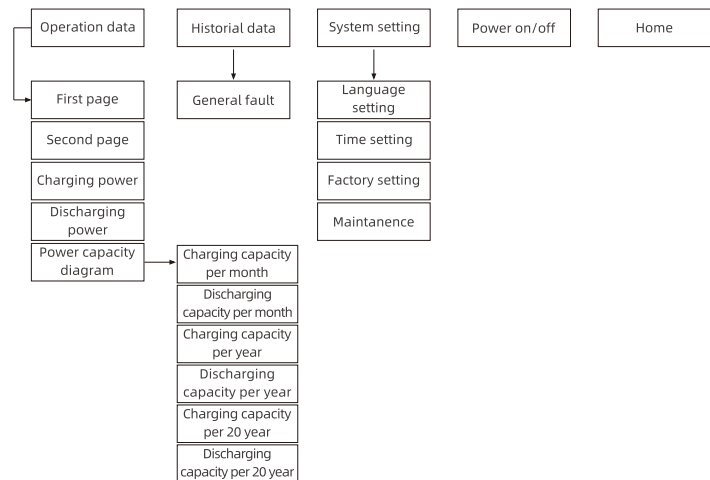


PCS LCD Menu logical structure

1. After the LCD is powered on, it enters the startup interface and home page for after 15s, but it still takes about 2 minutes to initialize. the inverter cannot be started until the initialization is completed.
2. at the top right of each page, The communication status between LCD and the inverter's control board (if √, the communication is normal, otherwise ×, communication failure), station number of the communication end where the inverter is located, system time, etc are displayed.
3. After power on and entering the home page, the program needs to be initialized for a period of time. When √ and numbers appear, the initialization is completed.

7.2 LCD operation


7.2.1 Home page

When powered or clicking "Home" button in any interface will enter into the Home page. The operating status of the inverter output power, safety standard, model, input and output voltage,current information can be viewed in the page. Pressing the following key can switch to other pages.

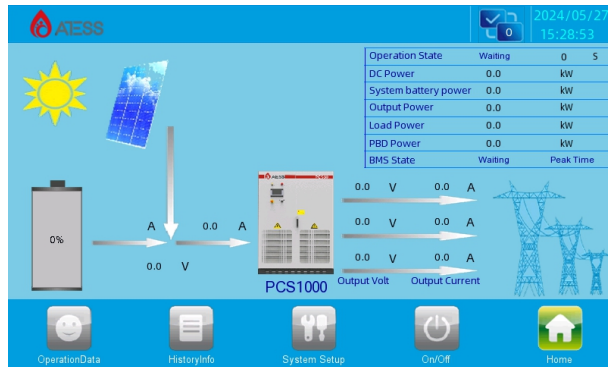

7.2.2 ON/OFF interface

Clicking "ON/OFF" button in any interface will enter into this interface. There are "ON" and "OFF" button which is used to turn on and turn off the inverter. Start up: turn the start knob to on and click "on" to start up successfully. Shut down: shut down by clicking "off", or turn the start / stop knob to off directly. If the machine will be turned off for a long time, use the off-on knob to shut it down.

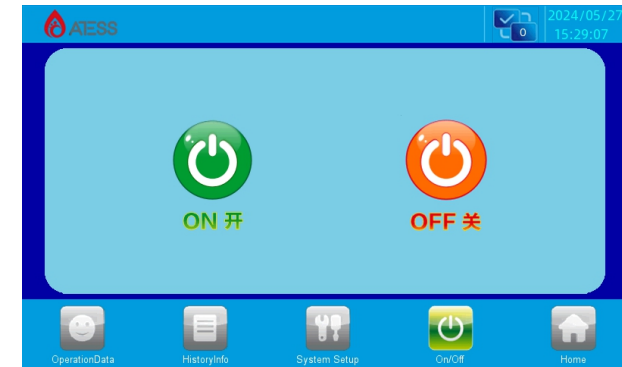

7.2.3 Operation data

Click [operation data] at the bottom of any other interface to enter the submenu of "operation data".

The submenu includes: operation data, power curve, charge and discharge capacity. The corresponding submenu interface can be accessed through the left button. The default one is "operation data" interface.

Operation data: display the current parameters and real-time data of energy storage power generation, including grid voltage, grid frequency, grid current, DC input voltage, DC input current, temperature in the case and total generation time (real-time update).



Data Export: Insert the USB disk and click Data Export to export the data on this page, as shown below



7.2.4 System setting


Clicking “System setting” button in any interface will enter into this interface.

Submenu: language settings, time settings, inverter information, maintenance. Pressing the left button can enter into the corresponding submenu interface. The default one is language setting interface.


Language Settings: Select language, currently it only supports Chinese, English.



Time settings: system time setting (if the date and time displayed on LCD is not inconsistent with the actual date and time, they can be modified here).

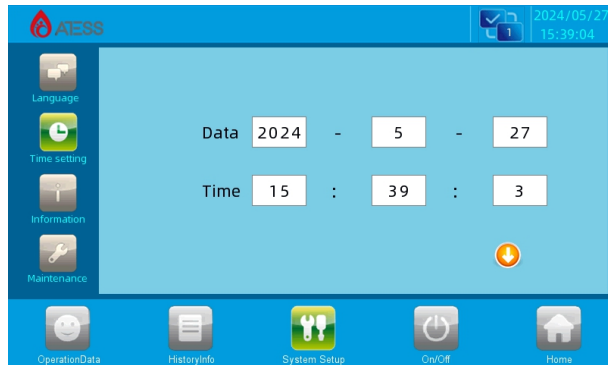


Device Information: This page shows the manufacturer, inverter serial number, hardware and software version information, and the date of manufacturing.

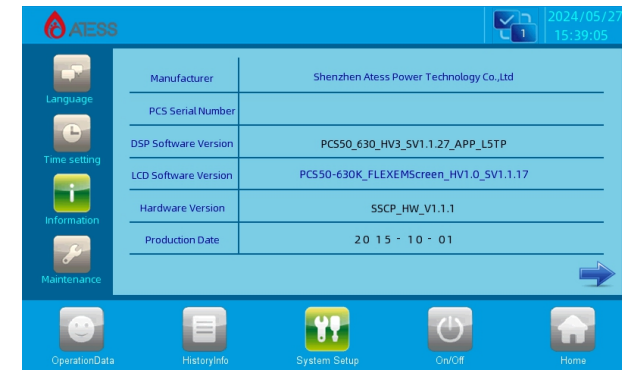

Maintenance: the interface requires a password to login. It is for electrician and maintenance personnel who are fully familiar with the structure and working principle of the DC grid system only, in order to avoid damage to personal safety and the inverter.

Enter the correct password to enter the submenu of "equipment maintenance". The submenu includes: protection parameters, calibration parameters, power grid management, factory settings. The default one is "protection parameters".

1. modify the set value. Click  to change the current value to the same value as the set value.
2. Some new LCD will save the data automatically.

There are several reasons why the current value cannot be changed to the set value:

- LCD response is slow, you can switch pages to speed up the update.
- The value exceeds the limit and cannot be saved.
- Other data on this page has errors and cannot be saved.

1. Protection parameters:



Name	Current Value	Setting Value
Grid Max Voltage(V)	0.0	0.0
Grid Min Voltage(V)	0.0	0.0
Grid Max Frequency(Hz)	0.00	0.00
Grid Min Frequency(Hz)	0.00	0.00
Check Time(S)	0	0
Output Power Limit(%)	0	0
Output Voltage Setting(V)	0	0
Output Frequency Setting(Hz)	0	0
Charge_Curr(A)	0	0

Grid Max. voltage: If it exceeds Max. power grid voltage, it will switch to off grid mode. The default setting is 110% of rated voltage.

Grid Min. voltage: If it gets lower than Min. power grid voltage, it will switch to off grid mode. The default setting is 90% of rated voltage.

Grid Max. frequency: If it exceeds Max. power grid frequency, it will switch to off grid mode. The default setting is rated + 2.

Grid Min. frequency: If it gets lower than Min. power grid frequency, it will switch to off grid mode. The default setting is rated - 2.


Check time: startup detection time, default 60 seconds, minimum 10 seconds, maximum 300 seconds.

Output power limit: AC output power percentage. It can be set to 1% - 120%, the default setting is 100%, and it is recommended not to exceed 110%.

Output voltage setting: the off-grid output voltage can be set to 380 or 400, and can be changed according to the actual needs. After the change, power off and restart to take effect.

Output frequency setting: the AC output frequency can be set to 50 or 60, and can be changed according to the actual needs. After the change, power off and restart to take effect.

Charge_curr(A): you can modify the battery charging current by changing this value. Please set it according to the actual parameters of the battery to avoid losses caused by battery overcharge. When the battery is with BMS, the BMS will send the maximum charging current limit, compare it with the charging current set on the screen, and take the smaller value for charging.

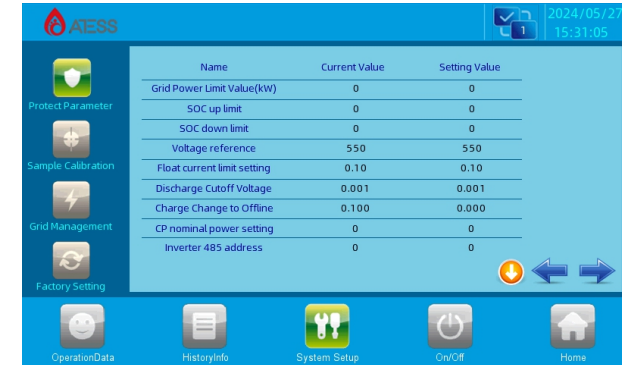

Name	Current Value	Setting Value
Grid Power Limit Value(kW)	0	0
SOC up limit	0	0
SOC down limit	0	0
Voltage reference	550	550
Float current limit setting	0.10	0.10
Discharge Cutoff Voltage	0.001	0.001
Charge Change to Offline	0.100	0.000
CP nominal power setting	0	0
Inverter 485 address	0	0

Grid power limit value: The maximum power can be taken from the grid.

SOC up/down limit: only valid in diesel generator mode and when the battery has BMS. When off grid and the current SOC is lower than the Min. SOC, the inverter sends the diesel generator starting command; in diesel generator mode, the current SOC is higher than the upper SOC limit, and the inverter sends the diesel generator closing command.

Voltage reference: No effect.

Float current limit setting: Set current limiting charging, when the current unit voltage is greater than (floating cell voltage - floating charge current limiting point), enter the current limiting charging state.

$$\text{Target charging current} = \frac{\text{floating cell voltage} - \text{current unit voltage}}{\text{floating charge current limiting point value}} * \text{battery charging current set value}$$

When the battery is with BMS, the charging current setting value of the battery will be compared according to the maximum charging current limit value sent by the BMS and the charging current setting value set on the screen, whichever is smaller.

The real-time cell voltage of the battery will be calculated according to the maximum cell voltage sent by the BMS.


When there is no BMS, it will enter floating charge current limiting mode in the DG mode and send the instruction to shut down the DG.

Discharge cutoff voltage: When the battery voltage reaches the discharge cut-off voltage, the battery stops discharging (the battery continues to discharge until the undervoltage alarm shifts to single PV mode and the battery fails if no PBD is connected), and the battery takes effect when no BMS occurs.

Charge change to offline: In single PV mode, the battery unit voltage reaches the set value when the battery unit voltage reaches the single PV off-grid mode.

CP nominal power setting: When the energy storage controller is equipped with a grid-connected PV inverter, the total power of the PV inverter needs to be set.

Inverter 485 address: 485 address, can't be repeated. The address must be set starting from No. 1 and must be continuous.

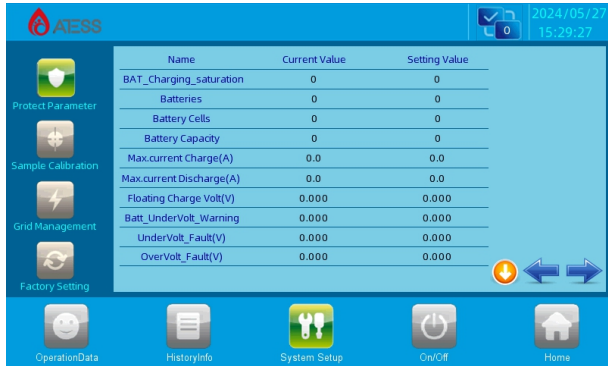

This page is for setting battery parameters. Batteries are an important part of the energy storage system. Ensure that the battery parameters are consistent with the actual situation.

Bat_Charging_saturation: Takes effect only in grid-connected mode. When the battery voltage stops discharging due to undervoltage or discharge cut-off, the battery unit voltage must reach the set value to resume discharging.

$$\text{Recovery discharge unit voltage} = \text{floating charge unit voltage} - \frac{\text{battery saturation set value}}{10}$$

This function does not take effect when the battery is lithium battery and BMS voltage judgment is not enabled on the PCS.

Batteries: The number of battery modules connected in parallel. e.g. 2V/200Ah , 240 strings, 2 series, then the number of groups is 2.

Battery Cells: The number of batteries in a string of battery. e.g. 2V/200Ah , 240 strings, 2 series, then the number of cells is 240.

Battery Capacity: Capacity of a battery group (unit: Ah). e.g. 2V/200Ah , 240 strings, 2 series, then the capacity is 200Ah.

Max.current Charge(A): Indicates the protection value of the total battery charging current.


Max.current Discharge(A): Specifies the protection value of the total discharge current of the battery.

Floating Charge volt(V): Set the floating charge unit voltage of the battery. When the battery cell voltage reaches this setting value, the charging current approaches 0A. It's calculated with the maximum cell voltage sent by BMS if there is BMS, otherwise calculated with the average voltage.

Batt_Undervolt_Warning: Indicates the unit voltage when the battery undervoltage alarm is generated. The minimum cell voltage sent by BMS is used when BMS is present, otherwise the average voltage is used for calculation.

UnderVolt_Fault(V): The unit voltage value when the battery undervoltage protection, when the battery voltage reaches this set value, the PCS will protect and stop. The minimum cell voltage sent by BMS is used when BMS is present, otherwise the average voltage is used for calculation.

OverVolt_Fault(V): The battery overvoltage unit voltage value. When the battery voltage reaches this set value, the PCS will protect and stop. The maximum cell voltage sent by BMS is used when BMS is available, otherwise, the average voltage is used for calculation.

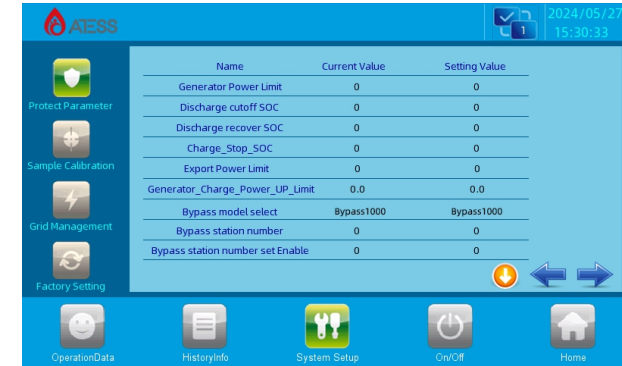

Generator Power Limit: Takes effect in only the "DG mode" mode. It is the power upper limit of the power generator and the limit of charging + load. Note that the power upper limit of the power generator cannot be lower than the total load value.

Discharge cutoff SOC: When the battery is a battery with BMS and SOC reaches the set value, the energy storage controller will stop the battery discharge and only the grid-connected state will take effect; The battery does not take effect when there is no BMS. If there is no BMS, use the discharge cut-off voltage to judge.

Discharge recover SOC: When the battery is with BMS, the discharge is triggered to stop the SOC and when the SOC is restored to the set value, the discharge can be continued. It only takes effect when grid-connected. If the battery has no BMS, the battery does not take effect. In this case, use the discharge saturation.

Charge_Stop_SOC: When the battery is with BMS, the SOC reaches the set value and stops charging, and it does not take effect when there is no BMS; This setting value and floating charge voltage take effect at the same time, whichever reaches it first takes effect.


Export Power Limit: The maximum power feed to the power grid, including PV, which can limit the power feed to the power grid.

Generator_Charge_Power_UP_Limit: The maximum charging power of the tanker to the battery, which can limit the charging power of the tanker to the battery.

Bypass model select: Select the correct bypass cabinet model when the bypass cabinet is used. Otherwise, power sampling errors may occur.

Bypass station number: This parameter is not required for single system. The parallel system is divided into two situations: 1. Each PCS is equipped with a bypass cabinet. In this case, the communication station number should be the same as the 485 address of the corresponding PCS. 2. All PCS share one bypass cabinet. In this case, the address should be the same as the address 485 of the PCS connected to the bypass cabinet.


Bypass station number set Enable: When you need to set the communication station number of the bypass cabinet, set it to 1 first and then change it. After the change is successful, set it to 0. Only the corresponding PCS and bypass cabinet should be enabled.

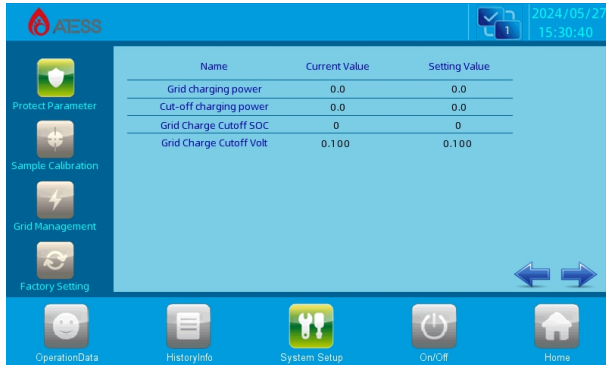

Grid charging power: Grid charging power limit value.

Cut-off charging power: When the discharge cut-off voltage or SOC is reached, the battery is trickle charged at that power to maintain the set discharge cut-off voltage or SOC.

Grid Charge Cutoff SOC/Grid Charge Cutoff Volt: When the grid power is sufficient and the grid power is allowed to charge, the maximum charge is to the grid charge cut-off SOC and grid charge cut-off voltage. This needs to be achieved in the battery first mode, the trough of the economic mode and time scheduling. When the grid charging cutoff SOC or grid charging cutoff voltage is reached, only PV or CP charges the battery, and the grid does not charge the battery.

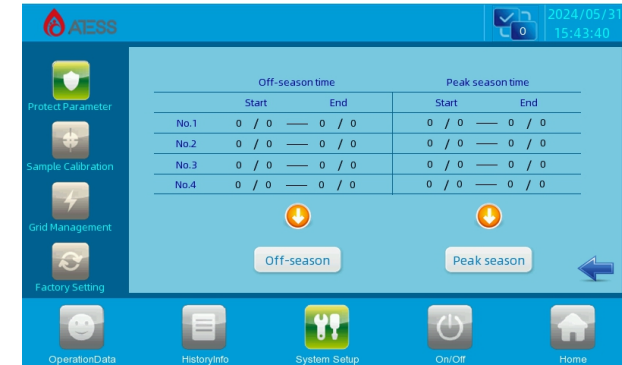

Description of economy mode:

Support off season and peak season time settings, as well as working and non-working day time Settings.

First of all, the electricity demand of a year is divided into off season and peak season, and the off-season and peak season can be set separately for the month range.

Second, after setting the month range, set the working day, Saturday and Sunday.

Finally, working days, Saturdays, and Sundays are set for on-peak, off-peak, and mid-peak periods, respectively. Among them, the corresponding mode in on-peak period is load first, the corresponding working mode in off-peak period is battery first, and the corresponding working mode in mid-peak period is that the battery is neither charged nor discharged.



This page is used to set economy mode and time shifting mode. This page takes effect only in economy mode and time shifting mode. The time range after 24:00 must be divided into two periods. For example, from 22:00 to 2:00, it can be divided into 22:00-24:00 and 00:0-2:00.


In the economic mode, only the effective time is set. The peak, valley, and fair working logic of the economic mode is implemented according to the three time periods.

In time shifting mode, not only the setting of the effective time takes effect, but also the setting of the effective power, the peak period, valley period and fair period that divided into five periods respectively. At the same time, there are five corresponding power settings.

The page without instructions is factory preset parameter, please do not modify. If the subsequent scheme changes, please modify the parameters under the guidance of ATESS.

2. Calibration parameters:

The modified parameters will be saved automatically. Failure to automatically save after modification means that this function cannot be enabled, if so please contact ATESS.

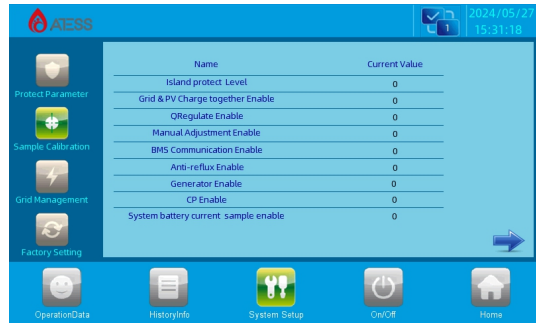

Island protect Level: Protection function to prevent the PCS from incorrectly entering the off-grid mode under abnormal conditions of power grid/generator. The value ranges from 0 to 9. 0 indicates disabled, and 1 to 9 indicates level. Do not set the value too high; otherwise, the power grid/generator will be affected.

Grid&PV charge together enable: When this parameter is set to 1, the power grid, DG and PV can charge the battery at the same time. PV supply is preferred, supplemented by power grid/DG when insufficient; When set to 0, the power grid/DG and PV cannot charge the battery at the same time. PV supply is preferred, and only when PV has no power will the power grid/DG charge the battery.

Q Regulate enable: After this parameter is set to 1, the reactive power mode can be set on the power grid management page. For further details, contact ATESS after-sales team.

Manual adjustment enable: It is only used to modify important parameters. Do not open it in normal situation. Please use it under the guidance of ATESS.


BMS communication enable: Set this parameter to 1 for BMS communication between the PCS and the battery. Otherwise, set it to 0.

Anti-reflux enable: Set this parameter to 1 when it is not allowed to feed electricity to the power grid. Otherwise, set it to 0.

Generator enable: If there is an DG connected to the system, set this parameter to 1; otherwise, set this parameter to 0.

CP enable: Set to 1 when the PCS is used with the solar grid-connected inverter, otherwise set to 0.

System Battery current sample enable: Set this parameter to 1 when the PCS uses the current sensor alone to collect battery current; otherwise, set this parameter to 0. Generally, the value is set to 0.

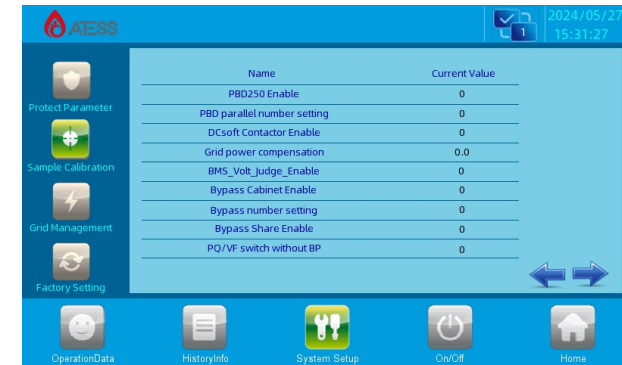

PBD250 Enable: Set this parameter to 1 when it is used with PBD250. Otherwise, set this parameter to 0.

PBD parallel number setting: Number of PBDs in the system.

DC soft Contactor Enable: Factory default, do not modify.

Grid power compensation: Reduces the power extraction from the grid, up to 10kw.


BMS_volt_judge_Enable: Set this parameter to 1 when the BMS SOC calculation accuracy is poor and system operation is affected and the single voltage is needed to determine the BMS. Otherwise, set this parameter to 0.

Bypass Cabinet Enable: To distinguish between systems with Bypass and systems without Bypass, if there is Bypass, set it to 1 to enable it; if there is no Bypass, set it to 0 and disable it.

Bypass number setting: Indicates the number of Bypass cabinets in the system.

Bypass Share Enable: When the parallel system shares one Bypass cabinet, set this parameter to 1. Otherwise, set this parameter to 0.

PQ/VF switch without BP: System operation mode without Bypass, 0 for pure off-grid system, and 1 for pure on grid system.

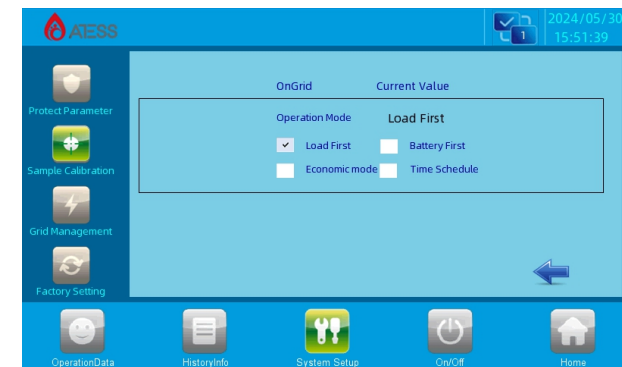

Connection mode selection page:


Different grid-connected working modes can be selected.



If user has customized the operation mode, please do not modify it.

The page without instructions is the factory preset parameter, please do not modify.

If the subsequent scheme changes, please modify the parameters under the guidance of ATESS.

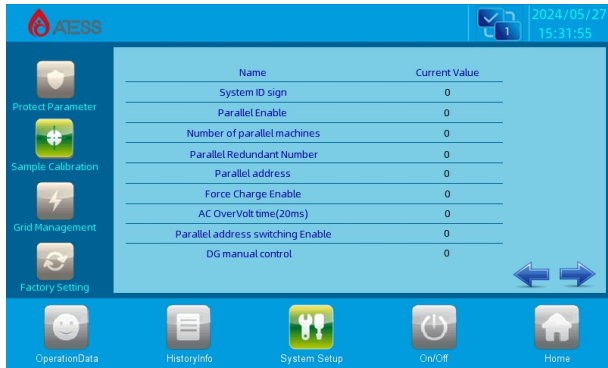

System ID sign: The server needs to distinguish whether each device is the same system and use this to collect data. Devices of the same system should be set the same non-zero number here.

Parallel Enable: When it is set to 1, parallel function is enabled. All the parallel units needs to be set to 1.

Number of parallel machines: Number setting of parallel system. When 2 inverters in parallel, set as 2; when three units set as 3.

Parallel Redundant Numbers: Maximum number of faulty machine, can be set to 0 or 1. When set to 0, if one machine in the parallel system goes down, all machines will turn into faulty mode; If set to 1, when the faulty number is less than 1, the other machine keeps running(max. faulty number that can be supported is 1).

Parallel address: The address of the parallel system, which cannot be repeated. The address must be set from No. 1 and must be continuous; Address 1 is the host.

Forced charging enable: Set to 1 when matched with batteries produced by ATESS, otherwise set to 0.

Forced charging enable: Set to 1 when matched with batteries produced by ATESS, otherwise set to 0.


AC Overvolt time (20ms): In off-info mode, when the energy storage controller triggers the AC overvoltage delay protection, do not change the value. Otherwise, system stability may be affected.

Parallel address switching Enable: When set to 1 and enabled, it prevents conflicting parallel addresses from being set in the system.


DG manual control: The function of manual switch Diesel Generator, set 1 for PCS sends a dry contact switch-on signal and set 0 for PCS sends a dry contact switch-off signal.

3. Power grid management


Parameters on this page are very important and are preset by the factory. Please do not modify without permission from ATESS. Otherwise, ATESS will not be responsible for the consequences.

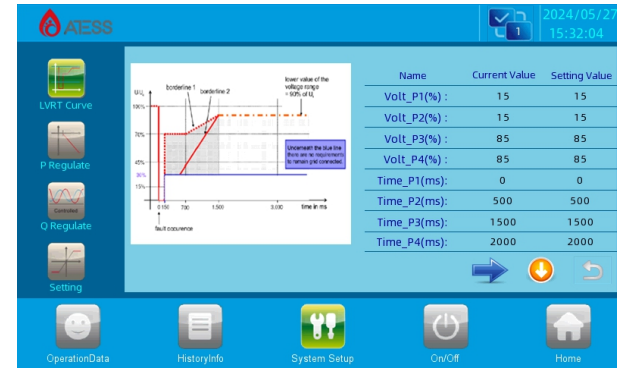


The parameters on this page are important and factory default parameters. Do not modify them.

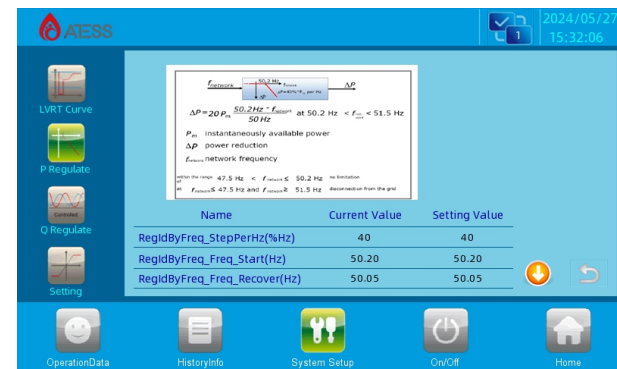

The parameters on this page are important and factory default parameters. Do not modify them.

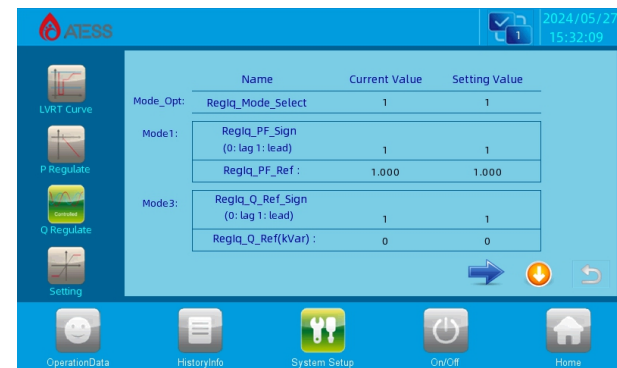

 The unspecified pages are factory preset parameters and should not be modified. If the solution changes, please modify the parameters under the guidance of ATESS.

The parameters on this page are important and factory default parameters. Do not modify them.


This page takes effect after reactive power adjustment is enabled.

Mode selection: Select the reactive power adjustment mode and set it to 1 or 3 or 4 Only 1 or 3 or 4 take effect temporarily.

Mode 1: Adjust the output power factor and direction of the energy storage controller.

Mode 3: Adjust the reactive power value and direction of the energy storage controller.

Mode 4: Adaptive adjustment of output reactive power. The reactive power reference of the grid needs to be set.

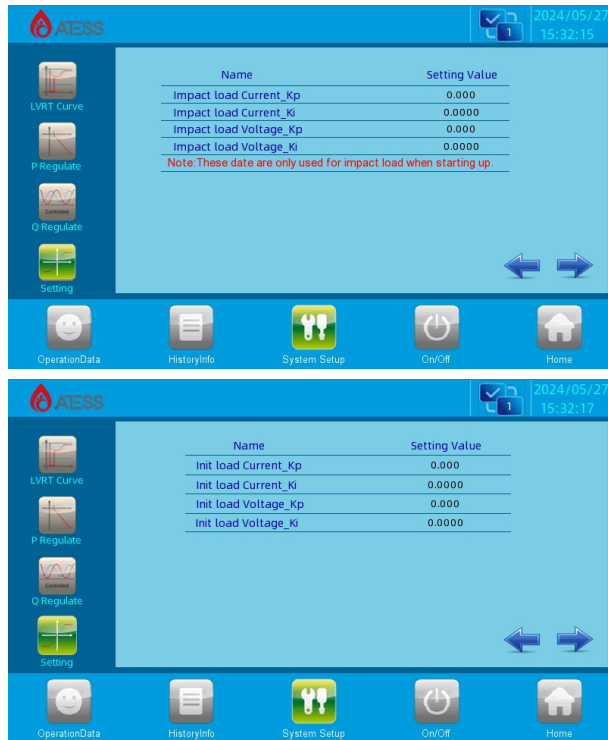

The last two pages of the protection point are important operation PI parameters, which affect the stable operation of the output. Please do not modify the PI parameters by yourself, but only with the permission of ATESS.




The page without instructions is the factory preset parameter, please do not modify. If the subsequent scheme changes, please modify the parameters under the guidance of ATESS.

On-off grid switching:




The page without instructions is the factory preset parameter, please do not modify. If the subsequent scheme changes, please modify the parameters under the guidance of ATESS.

4. Factory settings

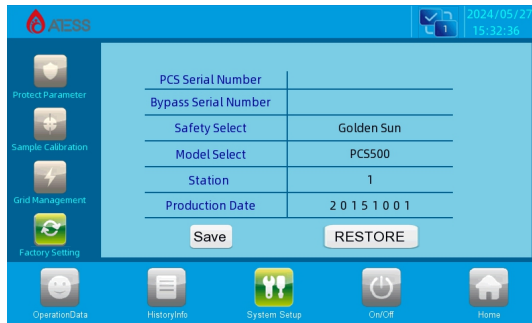

The value on this page are important factory preset parameters. Please do not modify them without consent of ATESS.



The page without instructions is the factory preset parameter, please do not modify. If the subsequent scheme changes, please modify the parameters under the guidance of ATESS.

PCS Serial Number: The serial number on the nameplate of each PCS.

Bypass Serial Number: The serial number on the nameplate of each Bypass.

Safety Select: PCS safety regulations. Do not modify personally, please under the guidance of ATESS after-sales service team.

Model Select: The model of PCS, please set the correct model for each PCS, the wrong model may cause problems. Do not modify personally. If need to modify it, please under the guidance of ATESS after-sales service team.

Station: 485 address for PCS. Parallel system needs to set from 1.

Product Date: Manufacture date of PCS.


Save: Click Save after modifying the data.

RESTORE: All used data reset 0, but do not clear parameter settings.

7.2.5 Historical information

Clicking "historical information" can enter into the sub-menu of the "historical information".

The submenu includes: Common historical failure, serious historical failure. Via the left button you can enter the corresponding submenu interface. The "common historical faults" is the default interface.

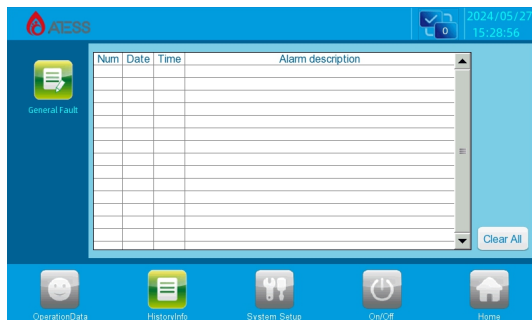

History of failure: all the common history of failure details can be found by flipping the page up and down.

The common fault information, see table 7.3.

7.2 LCD display information schedule

General history failure table

No	Information	
	English	Chinese
1	IGBT_Failure	IGBT永久故障
2	EEPROM_Write_Failure	EEPROM写永久故障
3	EEPROM_Read_Failure	EEPROM读永久故障
4	AC_MainContactor_Failure	主接触器永久故障
5	AC_SlaveContactor_Failure	辅助接触器永久故障
6	Bypass_Communication_Fault	旁路柜通信故障
7	BMS_Communication_Fault	BMS通信故障
8	BMS_Fault	BMS故障
9	Smoke_alarm_Fault	烟雾报警故障
10	PBD250_Communication_Fault	PBD250通讯故障
11	IGBT_Converter_Fault	变流器IGBT故障
12	Converter_L_OCP_Fault	变流器电感过流故障 (Trip)
13	AC_NoUtility_Fault	交流无市电故障
14	AC_GridPhaseSeque_Fault	交流电网相序反故障
15	AC_Volt_Unbalance_Fault	交流电压不平衡故障
16	AC_Wu_OverVolt_Fault	交流WU过压故障
17	AC_Wu_UnderVolt_Fault	交流WU欠压故障
18	AC_VW_OverVolt_Fault	交流VW过压故障
19	AC_VW_UnderVolt_Fault	交流VW欠压故障
20	AC_UV_OverVolt_Fault	交流UV过压故障
21	AC_UV_UnderVolt_Fault	交流UV欠压故障
22	AC_OverFreq_Fault	交流过频故障
23	AC_UnderFreq_Fault	交流欠频故障
24	GridCurr_High_Fault	电网电流高故障
25	Converter_LCurr_High_Fault	变流器电感过流故障 (RMS)
26	AC_Overload_Fault	过载故障
27	Converter_Module_OverTemp_Fault	变流器模块过温故障
28	Converter_L_OverTemp_Fault	变流器电感过温故障
29	Transformer_OverTemp_Fault	变压器过温故障

30	LowTemp_Fault	低温故障
31	EPO_Stop	紧急停机
32	KeyEmergencyStop	手动关机
33	LcdEmergencyStop	LCD关机
34	AC_MainContactor_Fault	交流主接触器故障
35	DC_MainContactor_Fault	直流主接触器故障
36	AC_SlaveContactor_Fault	交流辅助接触器故障
37	AC_Thunder_Fault	交流防雷器故障
38	DC_SoftStart_Fault	DC软启故障
39	INV_SoftStart_Fault	交流软启故障
40	INT_ConverterL_OverCurr_Fault	变流器电感过流故障 (INT)
41	Batt_OverVolt_Fault	电池过压故障
42	Batt_UnderVolt_Fault	电池欠压故障
43	Batt_OverCurr_Fault	电池过流故障
44	Batt_OverCharge_Fault	电池过充故障
45	Fault_Feedback_Warning	故障反馈告警
46	Temp_Derating_Warning	过温减载告警
47	Bstt_UnderVlt_Warning	电池欠压告警
48	Parallel_Uneven_Flow_Warning	并机不均流告警
49	CANb_Communication_Fault	CANb通信故障
50	Parallel_PLL_Signal_Fault	并机锁相同步信号故障
51	Parallel_Switch_Signal_Fault	并机切换同步信号故障
52	INV Module_OverTemp_Fault	逆变模块过温故障
53	PV Module_OverTemp_Fault	平衡板过温115度
54	Temp_Derating_Warning	过温减载告警
55	INT_Bus_Unbalance_Fault	母线不平衡 (INT) 故障
56	BusVolt_Unbalance_Fault	母线不平衡故障
57	BL_OCP_Fault	平衡板硬件过流 (Trip)
58	Hps_10min_3times_StopAlarm	10分钟3次故障
59	INT_BL_OverCurr_Fault	平衡板电流过流故障
60	INT_BUS_OverVolt_Fault	母线电压高故障
61	INV_A_OCP_Fault	A电感过流故障 (Trip)
62	INV_B_OCP_Fault	B电感过流故障 (Trip)
63	INV_C_OCP_Fault	C电感过流故障 (Trip)
64	BAT1_OverCurr_Fault	电池1过流故障故障
65	BAT2_OverCurr_Fault	电池1过流
66	GFDI_AirSwitch_Fault	GFDI空开回检异常

7.4 General troubleshooting

If there is a fault during the operation, please click the LCD "history information" page to view the fault information. The following are the common fault analysis and solutions of PCS:

1. Manual shutdown: turn PCS panel knob to "off"

solution: the knob is shut down normally, no need to handle.

2. LCD emergency stop: click "off" on PCS screen

Processing steps: the screen is shut down normally, no need to handle.

3. Emergency stop: emergency stop button pressed.

Handling steps: release the emergency stop button in case of no other abnormalities.

4. Batt_UnderVolt_Fault:

Possible reasons:

a. The battery voltage sampled on the screen reaches the under-voltage protection condition and triggers it.

b. The switch of battery on battery side or the on the energy storage controller is not turned on.

c. If this fault occurs during operation, the battery voltage may be pulled down due to high-power output, or the battery itself may be defective.

d. If it is a battery with BMS, this fault will also occur if the lowest cell voltage of the battery unit transmitted by the BMS to the energy storage controller reaches the protection condition.

Processing steps:

a. First, check the battery connection, screen sampling error, and battery parameter settings.

b. If it is a battery with BMS, check whether the BMS data meets the protection conditions.

c. If there is no problem with the above, please contact ATESS for assistance.

5. Batt_OverVolt_Fault:

Possible reasons:

a. The battery voltage sampled on the screen reaches the overvoltage protection trigger condition.

b. If it is a battery with BMS, this fault will also occur if the highest cell voltage of the battery unit transmitted by the BMS to the energy storage controller reaches the trigger protection condition.

7. Batt_OverCurr_Fault: the battery discharge current is higher than the maximum discharge current

Processing steps: check whether the maximum discharge current value of the battery is reasonable, multiply the maximum discharge current by the battery voltage, calculate the maximum discharge power of the battery, see whether it is less than the load power, if yes, reduce the load power.

8. BMS_Fault: secondary or tertiary battery failure

Processing steps:

A. check the specific faults reported by BMS

B. contact the battery manufacturer to solve the problem

C. restart after troubleshooting

9. BMS_Communication_Fault: the energy storage inverter did not receive CAN data sent by battery BMS

Processing steps:

A. check whether the CAN line of ATS is connected to the CAN-A port of the inverter's control board.

B. check if the L and H CAN line are connected reversely.

C. check whether the CAN line is interfered. Suggest to use sampling shielded communication line.

D. use the CAN box to check whether there is data sent by the BMS on the bus.

E. if the communication still fails, contact ATESS.

10. Bypass_Communication_Fault: the energy storage inverter did not receive can data sent by bypass cabinet

Processing steps:

A. check whether the CAN line of ATS is connected to the CAN-B port of the inverter's control board.

B. check whether the L and H CAN line is connected reversely

C. check whether the CAN line is interfered. Suggest to use sampling shielded communication line.

D. use CAN box to check if there is data sent by ATS on the bus.

E. if communication still fails, contact ATESS.

11. AC_NoUtility_Fault: no AC voltage.

Processing steps: generally, this fault will not fade out because there is no output due to other reasons.

12. AC_OverFreq_Fault: the power grid frequency exceeds the upper limit, and the energy storage inverter enters off grid state.

Processing steps: check whether the upper limit of power grid frequency is reasonable. If yes, wait until it returns to normal, the inverter will automatically enter into grid connection state.

13. AC_UnderFreq_Fault: the power grid frequency is lower than the lower limit, and he energy storage inverter enters the off grid state.

Processing steps: check whether the lower limit of power grid frequency is reasonable. If yes, wait until the power grid frequency returns to normal, PCS will automatically enter into grid connection state.

14. AC_UV_OverVolt_Rmt_Warning: when the utility grid voltage is higher than the upper limit, he energy storage inverter enters off grid state.

Processing steps: check whether the upper limit setting of power grid voltage is reasonable. If yes, wait until the power grid voltage returns to normal, and PCS will automatically enter into grid connection state.

15. AC_VW_OverVolt_Rmt_Warning: when the grid voltage is higher than the upper limit, PCS enters off grid state.

Processing steps: check whether the upper limit setting of power grid voltage is reasonable. If yes, wait until the power grid voltage returns to normal, and PCS will automatically enter into grid connection state.

16. AC_WU_OverVolt_Rmt_Warnin: when the grid voltage is higher than the upper limit, PCS enters off grid state.

Processing steps: check whether the upper limit setting of power grid voltage is reasonable. If yes, wait until the power grid voltage returns to normal, and PCS will automatically enter into grid connection state.

17. AC_UV_UnderVolt_Rmt_Warning: when the grid voltage is lower than the lower limit, PCS enters off grid state.

Processing steps: check whether the lower limit setting of power grid voltage is reasonable. If yes, wait for the power grid voltage to return to normal, and PCS will automatically enter into grid connection state.

18. AC_VW_UnderVolt_Rmt_Warning: when the grid voltage is lower than the upper limit voltage, PCS enters off grid mode.

Processing steps: check whether the lower limit setting of power grid voltage is reasonable. If yes, wait for the power grid voltage to return to normal, and PCS will automatically enter into grid connection state.

19. AC_WU_UnderVolt_Rmt_Warning: when the grid voltage is lower than the upper limit voltage, PCS enters off grid state.

Processing steps: check whether the lower limit setting of power grid voltage is reasonable. If yes, wait for the power grid voltage to return to normal, and PCS will automatically enter into grid connection state.

20. AC_GridPhaseSeque_Fault: reverse phase sequence connection of power grid

Processing steps: check the three lines of phase sequence U V W of the utility grid, which are corresponding to A B C connected to the AC input terminal of inverter.

21. OverTemp_Fault: the temperature inside of the machine is too high.

Processing steps:

A. check whether the power supply micro break of the inverter is turned on. If not, turn it on.

B. check whether PCS air inlet and outlet are blocked, and clean dust regularly.

C. wait for the machine to cool down, the fault is eliminated and inverter restart normally, and observe whether the fan works when the temperature reaches 60 °C. If not, please contact ATESS.

Regarding other faults, please contact relevant professionals of ATESS.

8 Operation

8.1 Power on steps

After installation and system settings are inspected, inverter can be started for operation.

● First run

The first operation steps are as follows:

1. Turn on the PV, battery, AC input and power supply micro breaks.
2. Check whether the screen sampling data is abnormal and consistent with the actual situation;
3. After checking, turn the knob to "on", click "on" on the LCD "on / off" page, and wait for the machine to enter "grid connection"; if the site is off grid, it will enter "off grid mode" after starting;
4. During operation, observe whether the data displayed on the screen is normal and whether there is fault information reported, and whether the machine has abnormal noise and smell; if any abnormal situation occurs, please stop the machine immediately for inspection.



Warning!

The bypass switch is only used for maintenance. Please do not turn it on during normal operation.

Manual shutdown

1. After clicking the LCD shutdown button to shut down the machine manually, it must be turned on manually through the start button (on) on the LCD; if the machine is turned off by turning the knob to "off", turn the PCS knob to "on" first, and then click the "on" button on the LCD "switch on" page to start the machine, otherwise inverter cannot start automatically.



Warning!

The machine is still with electricity after manual shutdown.

8.2 Pilot operation completion

The following procedures shall be carried out after the inverter is normally in operation.

Procedure 1: Inspect whether abnormality exists in the inverter, such as excessive noise, excessive heat, abnormal smell or smoke.

Procedure 2: Measure whether inverter voltage, current and THD are stable.

Procedure 3: Operate LCD control panel and inspect whether it displays normally and accurately.

Procedure 4: Test whether it conforms to the preset operation logic.

By now, the pilot operation of inverter is fully completed, and we can enter the daily operational maintenance.

8.3 Power off steps



CAUTION!

After the inverter is completely powered off, the general DC switch at battery side and the Grid switch at grid side still maintain voltage. If operations are needed, please be sure to cut off the outer power completely, and wait for not less than 5 minutes.

1. Turn the knob switch to "OFF" to shut down
2. Disconnect the AC general input switch
3. Disconnect the DC output switch

It is normal that the PCS generates an alarm during the power-off. You can continue to perform the power-off steps.

9 Routine Maintenance

9.1 Regular maintenance







Due to the influence of environment temperature, humidity, dust and vibration, the devices inside the inverter will be aged and worn, which will lead to potential failure inside the machine. Therefore, it is necessary to carry out daily and regular maintenance to ensure its normal operation and service life. All measures and methods to help the inverter in good working condition belong to the scope of maintenance work.

9.1.1 Safety precautions

- (1) Only qualified and authorized personnel can maintain the inverter.
- (2) When carrying out maintenance work, do not leave the screws, washers and other metal parts in the inverter, otherwise the equipment may be damaged.
- (3) If only the circuit breaker is opened, the cable connection terminal inside the inverter is still electrified.
- (4) Before opening the cabinet door and starting the formal maintenance work, it is necessary to not only disconnect the circuit breaker, but also disconnect the front and rear level circuit breakers of the inverter.
- (5) After the inverter stops operation, please wait at least 5 minutes before operating.
- (6) Disconnect all external connections of the inverter and the internal power supply of the equipment.
- (7) Ensure that the inverter is not inadvertently recharged.
- (8) Use a multimeter to ensure that the inverter is completely electrically neutral inside.
- (9) Make necessary grounding and short circuit connections.
- (10) Use insulating material cloth to cover the parts near the operation part that may be electrified.

9.1.2 System Maintenance

Tools to be used during maintenance

	Cell phone that can take photos
	Multimeter
	Thermometer
	Pen and paper
	Spanner, screwdriver etc
	Thermal imager


When doing maintaining inspection records, you need to perform inspection one by one according to the table and describe the faulty items.

2.1 Maintenance and inspection checklist for running system

When recording inspection and maintenance, inspection shall be carried out one by one following the table sequence, and the faulty items shall be described accordingly.

Please refer to Capture 10.3 Maintenance and inspection checklist for non-shutdown system.

After the inspection record is completed, photos of the operation status in home page and historical information page shall be taken for record, as shown in the following figures:

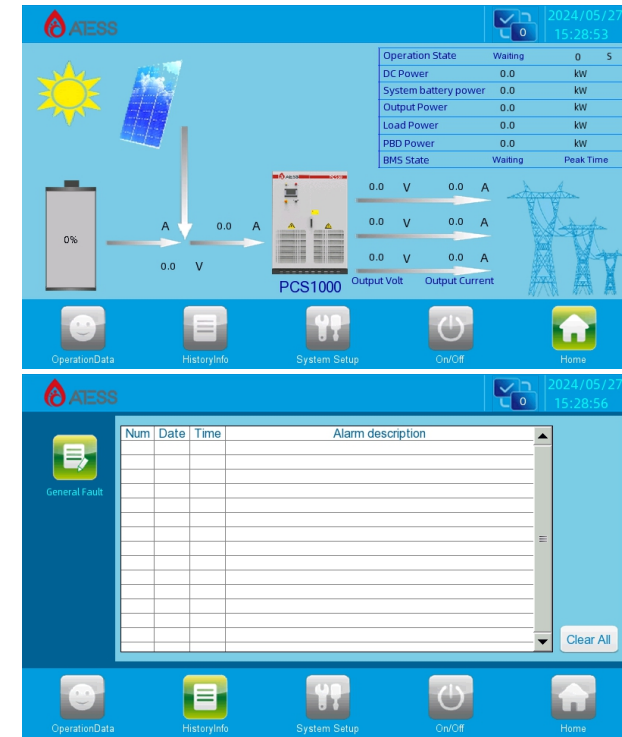

2.2 Maintenance and inspection checklist for shutdown system

Please refer to Capture 10.4 Maintenance and inspection checklist for shutdown system.

9.1.3 Relative operations



CAUTION!

All maintenance operations must be carried out in the condition that DC side and AC side of the inverter, PV module and AC distribution cabinet switch are all disconnected. Maintenance must be proceeded only after AC and DC disconnected for at least 5 minutes, in order to avoid electric shock!

Only professional technicians familiar with the system operation can perform such operation.

Disconnect the circuit breaker

Operate the DC switch of PV input and battery input to disconnect PCS from the PV and battery. And operate AC input and AC output switches to disconnect PCS from AC sources. Make sure that PCS won't switch on accidentally. Test with a multimeter to make sure the device is disconnected and with zero voltage. Even if PCS has been disconnected from the grid / main power supply, battery and PV, some of the internal components (such as capacitors) still have residual voltage and discharge slowly, so please wait at least 5 minutes after the circuit breaker is disconnected and use the multimeter to measure and confirm the safety before continuing operation.

Maintain and modify

Only ATESS authorized personnel can maintain and modify the equipment. For personal safety, use only the original accessories provided by the manufacturer. If you use non-original parts, you cannot ensure compliance with relevant certification standards in terms of electrical safety and EMC.

How to use bypass switch

If the PCS fails and cannot continue to operate, it needs to be shut down for maintenance, while the load connected to the PCS needs to continue working, the bypass switch can be used to keep the load work uninterruptedly under the power supply of power grid or generator, and the maintenance personnel can carry out maintenance work safely.

Step 1: turn on the bypass switch in case of machine failure.

Step 2: turn off the switches of "AC input", "AC output", "PV input" and "battery input". At this time, the AC and DC power are disconnected from PCS, and the load is all supplied by the power grid, after the residual power is discharged, maintenance work can be carried out.

Note:

1. After power off, wait for 5 minutes to confirm safety before carrying out maintenance work.
2. Use the multimeter to ensure safety before disassembling and other work.


Function and safety parameters

Do not change parameters of PCS without the authorization of the local power supply company and the instruction of ATESS. Unauthorized change of functional safety parameters may cause injury to personnel or inverter damage, in this case, ATESS will not provide warranty services.

Replace the dust screen

During the use of PCS, the dust on the top shall be cleaned regularly, and the dust screen at the air inlet shall be cleaned or replaced. During the cleaning, PCS needs to be power-off.

Replacement method of dust screen: the dust filter cotton on the door panel can be directly pulled up for cleaning and replacement.



To ensure the normal operation of the machine, clean the air filter regularly. Not cleaning for a long time may affect the intake air volume and cause overheat.

9.2 Waste disposal

The inverter will not cause environmental pollution, since the all the components meet the requirements of environmental protection. According to environmental protection requirements, user shall dispose the inverter in accordance with the relevant laws and regulations.

Appendix 10

10.1 Specification

Model	PCS100	PCS250	PCS500	PCS630
Battery parameter				
Battery operating voltage	500-820V		600-900V	
Max. battery charging/ discharging current	220A	550A	917A	1155A
Max. battery charging/ discharging power	110kW	275kW	550kW	693kW
AC parameter				
Rated voltage	400Vac			
Rated current	144A	361A	722A	909A
Rated power	100kW	250kW	500kW	630kW
Max. AC apparent power	110kVA	275kVA	550kVA	693kVA
Rated frequency	50/60Hz			
Frequency Range	45-55Hz/55-65Hz			
Power factor	0.8lagging—0.8leading			
THDI	<3%(Full load)			
THDU	≤2%			
Overload capacity	110%-10 mins,120%-1 min			
Other parameter				
Ingress Protection	IP20(Outdoors)			
Protective class	Class I			
Mains over voltage category	ClassIII			
Demand response mode	DRM0-8(optional)			
Inverter topology	Isolated	External isolated transformer		
Noise emission	< 65dB(A)@1m			
Cooling	Intelligent air cooling			
Humidity	0-95% non-condensing			
Maximum altitude	6000(derate over 3000m)			
Build-in transformer	Yes	No		
Operating temperature	-25°C~+55°C			
Active anti-islanding method	In the absence of a reference, the energy storage controller output frequency is disturbed			
Communication				
LCD display	Touch screen LCD			
Communication interface	RS485/CAN			

Model	PCS1000
AC(Grid-connected)	
Apparent power	1000kVA
Rated power	1000kW
Rated voltage	400V
Rated current	1443A
Voltage range	360V-440V
Rated frequency	50/60Hz
Frequency range	45-55/55-65Hz
THDI	<3%
PF	0.9lagging-0.9leading
AC connection	3/ PE
AC(off-grid)	
Apparent power	1000kVA
Rated power	1000kW
Rated voltage	400V
THDU	≤2% linear
Rated frequency	50/60Hz
Overload capability	110%-10min 120%-1min
DC(battery)	
Max discharge power	1040kW
Maximum discharge current	1600A
Max charge power	750kW
Maximum charge current	1154A
Current regulation	±1%
Voltage regulation	±1%
Voltage ripple	<3%
Current ripple	<2%
Voltage range	650V-860V
General Information	
Maximum efficiency	98.5%
Protection degree	IP20
Noise emission	65dB(A)@1m
Environmental temperature	-25°C to +55°C
Cooling	Forced air
Relative humidity	0-95% non-condensing
Maximum altitude	5000m(derate over 3000m)
Dimension(W/D/H)	1510*850*1900mm
Weight	1500kg
Transformer	No external isolation transformer required
On/Off grid transfer	Manual(default) Automatic(optional)≤10ms
Communication	
Display	Touch screen
Communication interface	RS485/CAN

10.2 ATESS Factory warranty

● Warranty period

The warranty period of this product is one year. If otherwise specified in the contract, the contract shall prevail.

During the warranty period, the customer shall show the invoice and date of purchase to the service personnel of ATESS. At the same time, the nameplate mark on the product shall be clear and visible, otherwise, ATESS has the right not to provide warranty service.

● Warranty conditions

In the event of failure during the warranty period, ATESS will repair or replace the product free of charge; The customer shall Set aside some time to repair the faulty machine.

● Liability exemption

In case of the following circumstances, ATESS has the right not to conduct warranty:

1. Products without logo of ATESS Power Technology logo.
2. The product or component that has exceeded the valid warranty period of ATESS.
3. Failure or damage (such as high temperature, low temperature, too wet or dry, high altitude, unstable voltage or current, etc.) caused by working in beyond-specified environment or wrong installation, storage or use that violates the instructions.
4. Failure or damage caused by unauthorized installation, repair, modification or disassembly. except for those authorized by ATESS.
5. Failure or damage caused by using components that not supplied by ATESS.
6. Failure, damage or transportation damage caused by accident or human factors (operation error, scratching, carrying, bumping, improper voltage connection etc.).
7. Failure or damage caused by force majeure (such as earthquake, lightning, fire etc.).
8. Failures or damages caused by other factors rather than quality problems of the supplied product itself(including components).

10.3 Maintenance and inspection checklist for running system

No.	Category	Check item	Check method	Standard	Result	Problem description	Check frequency
1	System operation status check	Whether the LCD display of the machine is in normal operation	Visual inspection	Operation status display is not "fault" or "serious fault"	<input type="checkbox"/> Normal <input type="checkbox"/> Abnormal		
2		Whether there is error recorded in history that caused shutdown	Visual inspection	No error caused shutdown	<input type="checkbox"/> Normal <input type="checkbox"/> Abnormal		
3		Whether the data transmission of monitoring device is normal	Monitoring web page / APP	Monitoring connection and data transmission are normal	<input type="checkbox"/> Normal <input type="checkbox"/> Abnormal		
4		Whether the fan rotates normally and the air outlet is normal (first check whether the temperature collected by the equipment reaches the fan opening condition, which normally is 60 °C)	Visual inspection Thermal imager	Normal rotation, normal air output	<input type="checkbox"/> Normal <input type="checkbox"/> Abnormal		Once a month
5		Whether the equipment has abnormal smell or sound	Smell, listen	No abnormal sound or smell	<input type="checkbox"/> Normal <input type="checkbox"/> Abnormal		
6		Emergency stop button (when the system is in standby mode)	Manual	The circuit breaker trips after pressing the emergency stop button	<input type="checkbox"/> Normal <input type="checkbox"/> Abnormal		

10.4 Maintenance and inspection checklist for shutdown system

No.	Category	Check item	Check method	Standard	Result	Problem description	Check frequency
1	System cleaning	Whether there is water leakage or other foreign matters in the room or container	Visual inspection	No water leakage or foreign matter	<input type="checkbox"/> Normal <input type="checkbox"/> Abnormal		Once a month
2		Whether there are rodents and insects such as rats, geckos, cockroaches and ants in the cabinet	Visual inspection	No animals or insects	<input type="checkbox"/> Normal <input type="checkbox"/> Abnormal		
3	System cable connection (power-off inspection)	Whether the power cable connection is loose	Manual /Wrench	No looseness	<input type="checkbox"/> Normal <input type="checkbox"/> Abnormal		
4		Whether the communication cable connection is loose	Manual bolt driver	No looseness	<input type="checkbox"/> Normal <input type="checkbox"/> Abnormal		
5	Internal cleaning	Check equipment ground connection	Visual inspection/ Multimeter	$\leq 4\Omega$	<input type="checkbox"/> Normal <input type="checkbox"/> Abnormal		Once a month
6		whether the external connection of the equipment is damaged	Visual inspection	No damage	<input type="checkbox"/> Normal <input type="checkbox"/> Abnormal		
7		whether there is moisture or condensation inside the cabinet	Visual inspection	No condensation no moisture	<input type="checkbox"/> Normal <input type="checkbox"/> Abnormal		
8		Whether there is obvious dust inside the cabinet	Visual inspection	No obvious dust	<input type="checkbox"/> Normal <input type="checkbox"/> Abnormal		
9		Whether the front and rear dust screens has blockage	Visual inspection	No blockage	<input type="checkbox"/> Normal <input type="checkbox"/> Abnormal		
10		Whether there is obvious damage inside the equipment	Visual inspection	No damage	<input type="checkbox"/> Normal <input type="checkbox"/> Abnormal		
11	whether there is obvious rust inside the cabinet	Visual inspection	No rust	<input type="checkbox"/> Normal <input type="checkbox"/> Abnormal		Once a month	
12	Safety signs	Visual inspection	Safety signs are not shed	<input type="checkbox"/> Normal <input type="checkbox"/> Abnormal			

Note: the table only indicates the recommended maintenance frequency of the product. The actual frequency shall be determined according to the specific installation environment. The scale of power station, location and site environment will affect the maintenance frequency. If the operation environment is windy and dusty, it is necessary to shorten the period and increase the frequency.