



SHENZHEN ATESS POWER TECHNOLOGY CO.,LTD

GROWATT-ATESS Industrial Park, No.23 Zhulongtian Road, Shuitian Community,
Shiyan Street, Baoan District, Shenzhen

Tel: +86 755 2998 8492

Web: www.atesspower.com

Email: info@atesspower.com

Revised date: 2025-01-02

ATESS ATS-S User Manual

Contents

1 About this Manual

- 1.1 Contents
- 1.2 Target readers
- 1.3 How to use this manual

2 Safety Instructions

- 2.1 Symbols explanation
- 2.2 Notice for use
- 2.3 Installation
- 2.4 Operator
- 2.5 Important notes

3 Product Description

- 3.1 ATS-S
- 3.2 Circuit diagram of ATS-S
- 3.3 Layout of the main components
- 3.4 Product information

4 Transportation and Storage

- 4.1 Transportation
- 4.2 Inspection and storage

5 Products Installation

- 5.1 Installation condition and requirements
- 5.2 Installation on the wall
- 5.3 Tools and spare parts required for whole machine installation
- 5.4 Mechanical installation
- 5.5 Electrical installation
- 5.6 Communication
- 5.7 ATS-S internal power supply wiring
- 5.8 Cable connection between HPS and ATS-S

6 Commissioning

- 6.1 Inspection before operation

7 Routine Maintenance

- 7.1 Regular maintenance
- 7.2 Waste disposal

8 Appendix

- 8.1 Specification
- 8.2 ATESS factory warranty

1 About this Manual

This chapter describes the contents of this manual, target reader, and safety symbols, can help users to have a better understanding of the manual.

1.1 Contents

This manual applies to ATESS ATS-S , it contains:

● Safety instruction

Attention that needs to be paid when operating and maintaining ATESS ATS-S model.

● Product description

Function, structure, principle and package information of the ATESS ATS-S model.

● Transportation and storage

The mode of transportation of the product and the related storage precautions notice.

● Installation

ATS-S installation conditions, tools, mechanical and electrical installation, the communication connection etc..

● Commissioning

Inspection before commissioning.

● Routine maintenance

Daily maintenance of ATS-S, the replacement of some spare parts and waste disposal instruction.

● Appendix

Technical data, warranty policy and contact information etc..

1.2 Target readers

Qualification:

- Only professional electricians or professionally qualified personnel can transport or install this product.
- The operator should be fully familiar with the structure and working principle of the entire ATS-S.
- The operator should be fully familiar with this manual.
- The operator should be fully familiar with the local standards of the project.

1.3 How to use this manual

Read this manual before installation of the ATESS ATS-S. Store this manual where accessible at all times.

The contents of this manual will be periodically updated or revised if necessary.

2 Safety Instructions

2.1 Symbols explanation

In order to ensure the personal and property safety of the user during installation, or optimally efficient use of this product, symbols are used highlight the information. The following symbols may be used in this manual, please read carefully, in order to make better use of this manual.

	DANGER DANGER indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.
	CAUTION CAUTION indicates there is potential risk, if not avoided, could result in equipment malfunction and property damage.
	Caution, risk of electric shock When battery bank connecting point are exposed, there will be DC voltage in the equipment DC side; and when output breaker is on, there is a potential risk of electric shock.
	Caution, risk of fire hazard Suitable for mounting on concrete or other non-combustible surface only.
	Protective conductor terminal ATS-S has to be firmly grounded to ensure the safety of personnel.
	Risk of electric shock Energy storage timed discharge electrical shock danger exists in the capacitor; the cover shall be moved at least 5 minutes later after all powers are disconnected.

2.2 Notice for use

ATS-S installation and service personnel must be trained and familiar with the general safety requirement when working on electrical equipment. Installation and service personnel should also be familiar with the local laws and regulations and safety requirements.

- Read this manual carefully before operation. The equipment will not be under warranty if failing to operate according to this manual.
- Operation on ATS-S must be for qualified electrical technician only.
- All electrical operation must comply with local electrical operation standards.

2.3 Installation

Proper installation requires following all the instructions in the user manual involving transportation, mounting, wiring and commissioning. ATESS does not cover warranty for ATS-S damage due to failing to use it properly.

The protection level of ATS-S is IP65.

Please refer to chapter 5 for installation instruction.

Other notice for using ATS-S:

- Pay attention to the safety instructions listed here and below.
- Pay attention to the user manual of energy storage controller.
- Technical data related to equipment shall be considered.

2.4 Operator

ATS-S installation and service personnel must be trained and familiar with the general safety requirement when working on electrical equipment. Installation and service personnel should also be familiar with the local laws and regulations and safety requirements.

2.5 Important notes



Item 1: Static electricity can cause damage to ATS-S

Electrostatic discharge may cause unrecoverable damage to ATS-S internal components!

When operating ATS-S, operator must comply with anti-static protection norms!

Item 2: Restriction

ATS-S cannot be directly used to connect the life support equipment and medical equipment!

Item 3: Precautions

Make sure installation tools or other unnecessary items are not left inside the ATS-S before starting up.

Item 4: Maintenance notice


Maintenance can only be carried out after ATS-S totally discharged.

3 Product Description

3.1 ATS-S

ATS-S produced by ATESS is designed to work with ATESS HPS hybrid inverter. It mainly enables HPS system to connect with diesel generator and power grid at the same time.

3.2 Circuit diagram of ATS-S

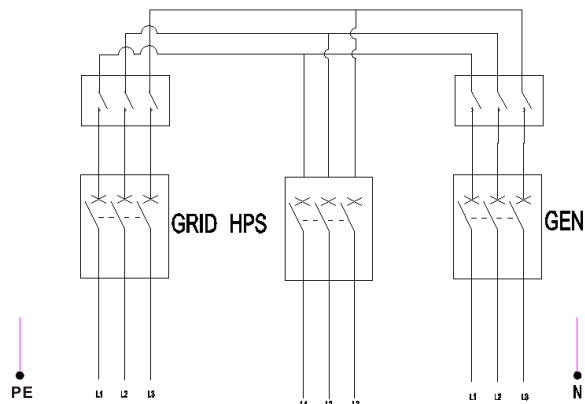

Module 1	Grid input	The module realizes on-off grid switching between HPS and utility grid.
Module 2	DG input	The module realizes on-off grid switching between HPS and DG.
Module 3	Select DG or grid input function	The module is only needed when DG and grid are both connected to the system. Otherwise there will not be this module.


3.3 Layout of the main components

3.3.1 External components

The external components of a ATS-S contain only two indicators.

Indicator


ATS-S adopts intelligent design. The current power status of it can be known through three indicator lights on the door pan

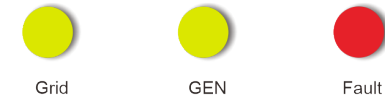

LED	Description
GEN	The indicator lights up when there is power on GEN side
Grid	The indicator lights up when there is power on grid side
Fault	The indicator lights up when there is fault on the ATS-S

3.3.2 Internal component

The internal parts of ATS-S include HPS circuit breaker, DG circuit breaker, power grid circuit breaker, power grid contactor, DC contactor, power supply micro break, PCB, etc.

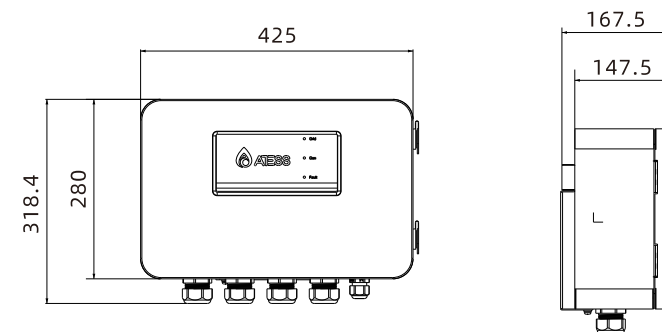

No.	Item name	Description
1	Control board	Control logic of ATS-S and communication with HPS
2	Grid switch	Control connection with grid
3	DG switch	Control connection with DG

3.4 Product information

3.4.1 Dimension and weight

Model	Dimension(W*H*Dmm)	Net weight(kg)
ATS-S	W425*D280*H167	10.5

Fig--Dimension and weight of ATS-S

Note: the ATS-S cabinet is customized according to the needs of the project, the actual size and weight could have deviation from the above table, please confirm with our sales for the actual data.

3.4.2. Packing information

NO	Name	Unit	Qty.	Note
1	ATS-S	pcs	1	Key included
2	User manual	pcs	1	

Figure--Packing information

Transportation and Storage 4

4.1 Transportation

Transportation should follow the transportation methods described in the user manual. ATS-S's weight and center of gravity should be taken into account during transportation. The center of gravity is marked on the box.

4.2 Inspection and storage

ATS-S should be carefully checked before signing the document from the transportation company. Check the received items against delivery note, and if there is any defect or damage, immediately notify the transportation company. If necessary, you can seek help from ATESS Customer Service department.



Caution

ATESS ATS-S can only be stored when it is stopped and all the doors are closed in a dry room to protect the internal circuits against dust and moisture.

5 Installation

5.1 Installation condition requirements

To ensure normal operation of the machine, the installation environment is required as follows:

- The ingress protection of ATS-S is Ip65.
- The installation environment shall be clean.
- As some noise will be produced in operation, this equipment shall be installed far from residential quarters.
- The installation surface must be sufficiently flat and structurally robust to safely support the weight of the ATS-S.
- The installation position shall be convenient for maintenance.
- Ambient temperature range: -25°C~55°C.
- Appropriate space shall be reserved for the machine to ensure ventilation and cooling.
- We suggest ATS-S is installed in the distribution room. The floor, wall clearance, Ventilation equipment and precaution should be designed by professional personnel and satisfy the following requirements.

● Foundation requirement

ATS-S must be installed on a flat surface that remains stable without sagging or tilting. The foundation should be firm, safe, and reliable, capable of withstanding the load of the ATS-S.

● Clearance space

When installing the ATS-S, adequate space should be reserved on the wall or around other equipment, to meet the strictest maintenance requirements, including passage, emergency access, and ventilation. There should be at least 1.1 meters of clearance in front of the ATS-S installation location, and at least 0.5 meters of space above the unit to facilitate installation, cooling, and maintenance.

● Wiring specification

Cables in ATS-S can be classified into either power cables or data cables. In cabling, the power cable shall be kept far away from, and the cable shall be kept in right angle at cross. The cable shall be as short as possible, and an appropriate distance shall be kept to the power cable.

The power cable and data access shall be placed in different cable trenches respectively to avoid lengthy routing between the power cable and other cables, so as to reduce the electromagnetic interruption caused by sudden change of the output voltage. The distance among the power cable and data access shall be more than 0.2m. When the cables are crossed, the cross angle shall be 90 degrees, while the distance can be reduced appropriately.

● Ventilation requirement

During operation, the ATS-S generates heat. If the ambient temperature is too high, the electrical performance of the equipment may be affected or even lead to damage. Therefore, adequate heat dissipation should be considered when designing and controlling the room to ensure the equipment operates efficiently under high temperatures. Ensure at least 0.5m of space in front of the ATS-S installation location and no more than 0.6m of space above to facilitate installation, cooling, and maintenance.

● Ventilation environment

To satisfy the ventilation requirement of ATS-S, its installation environment shall meet the following conditions:


The ATS-S should be installed as far as possible in environments with a temperature range of -25°C~55°C.

● Ventilation equipment


To ensure safe and reliable operation of the equipment, the ambient temperature must be within the permission range -25°C~ 55°C, therefore, appropriate ventilation devices must be equipped with to release the heat generated by the equipment.

5.2 Installation on the wall


5.2.1 Open the packaging, you'll see a ATS-S, a mounting bracket, a user manual and a bag of mounting accessories.

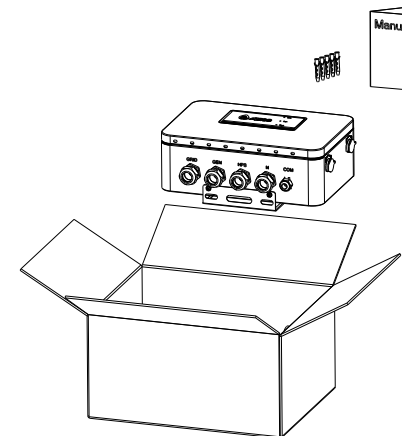

5.2.2 Remove the mounting bracket from the ATS-S, use it as a template to mark the position of the drill holes. Drill the holes and hammer the expansion bolts in the accessories bag into the holes. Then fix the mounting bracket onto the wall.

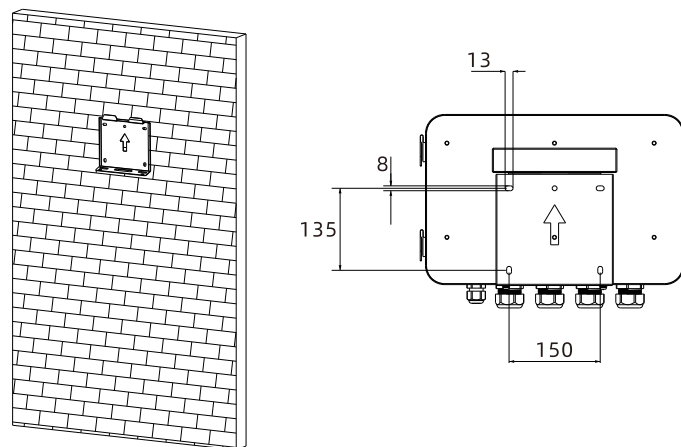

5.2.3 Put the ATS-S onto the bracket, and fix it with the 2 screws at the bottom of the ATS-S. The installation is done.

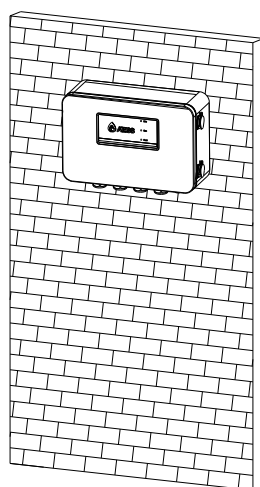

5.3 Tools and spare parts required for whole machine installation

Tools and spare parts required for installation is as follows:

- Torque wrench
- Screwdriver
- Wire stripper
- Terminal crimping machine
- Heat dryer
- Megger and multimeter

5.4 Mechanical installation




5.4.1 Transportation of packaged whole machine

Note 1: ATS-S is integrated and cannot be disassembled either in transportation or installation. Any fault attributed to modification unauthorized by the ATESS is beyond the quality assurance.

Note 2: In movement, tilt, violent shake or sudden force upon ATS-S shall be prevented, such as sudden down of lifting.

Note 3: Please read carefully the labeled parameters to select an appropriate transportation means and storage place.

To keep the equipment in a better protective status, please adopt transportation with package as much as possible, and comply with the labels printed on the package in transportation:

Sign	Indication
	Face up to prohibit ATS-S horizontally, tilted or upside down
	Handle with care, to avoid the transport environment too intense collision friction damage to ATS-S
	Keep away from moisture

5.4.2 Movement and installation of bare machine

● Demolish the package of ATS-S

Please remove the packaging from the equipment following these steps:

Step 1: Open the top of the cardboard box.

Step 2: Remove any outer packaging materials from the equipment.

Step 3: Carefully take out the device.

- Take necessary auxiliary measures to ensure the safety of transportation personnel.

5.5 Electrical installation

5.5.1 Input and output requirements

Caution, risk of danger



There is a danger of electrical shock of high voltage in ATS-S' operation; only electricians of professional skills can operate.
All connections with this equipment shall be done under non-voltage state.
ATS-S may be damaged if input or output terminal is incorrectly plugged.
Failure of acting upon this information may cause serious personnel injury or significant property loss even to death.

● Load

The maximum current of each load should not exceed 120A.

● Three phase grid connection

Grid required to be connected with the system is three phase grid, and should be in accordance to the previous agreed grid level. Otherwise, damage to the machine due to voltage level problems is not in the scope of warranty.

● Cable requirements

1. Please select the corresponding withstand voltage cable according to the voltage level.
2. The current may vary due to voltage fluctuations and different load conditions. Please calculate the appropriate cable diameter based on the actual voltage range. The following table provides cables with maximum current capacity for reference, based on voltage..

		HPS input	Grid input	DG input	N line	Ground line	Communi- cation line
ATS-S	Diameter (mm ²)	25 mm ² cables each phase	25 mm ² cables each phase	25 mm ² cables each phase	25 mm ² cables each phase	25mm ² special yellow and green wire	0.75mm ² special twisted pair shielded communication cable
	Aperture	Φ8	Φ8	Φ8	Φ8	Φ8	

5.5.2 AC side wiring

Caution, risk of danger



When connecting the AC grid, cut off the circuit breaker at the AC side to ensure that the AC wire connecting to terminals has no electricity.

The output voltage of the AC side of ATS-S is 208-400Vac, the wiring method of AC side and grid side is as follows:

- 1) Cut off the circuit breaker at grid side, to ensure that the AC wire connecting to terminals has no electricity. Confirm it with a multimeter.
- 2) Ensure that the wiring phase sequence at AC side is in consistent with the phase sequence at grid side.
- 3) Strip the insulation skin off at the end of the cable
- 4) Crimping copper nose
 1. Put the exposed copper core of the stripped wire head into the crimping hole of the copper nose.
 2. Use the terminal crimper to compress the copper nose of the wiring, and the number of crimping shall be more than two.
- 5) install the shrink fit sleeve.
 1. Select the heat shrinkable sleeve which is more consistent with the cable size, length is about 5cm.
 2. The heat shrinkable sleeve shall be sleeved on the copper nose of the wiring to completely cover the wire pressing hole of the copper nose.
 3. Use a heat blower to tighten the heat shrink sleeve.
- 6) Connect "L1" cable to "L1" of AC distribution cabinet, i.e. phase a (U). Select the bolts that match the copper nose.
- 7) connect "L2" of AC output to "L2" of AC distribution cabinet, i.e. phase B (V); connect "L3" of AC output to "L3" of AC distribution cabinet, i.e. phase C (W); connect N-line to N wire on ATS-S.

5.5.3 Diesel generator wiring

The connection between diesel generator and ATS-S is the same as that of power grid. Connect the diesel generator to the diesel generator access port of ATS-S.

Note: all circuit breakers in ATS-S are with silk screen printing. When connecting to power grid and DG, they must be connected correspondingly. The wrong position or phase sequence are not allowed. Otherwise, the system will not operate normally and even damage the machine.

5.5.4 Earthing

The ATS-S must be properly grounded to ensure safety. Please verify that the connection between the PE copper in the distribution cabinet and the ATS-S is secure. Additionally, ensure that the grounding cable is at least half the size of the load cable, and that the grounding resistance does not exceed 4 Ω.


All wiring into the channel at the bottom of ATS-S to be all the wiring is completed, the connection port must be sealed with dust cotton, to prevent dust from entering the inside of ATS-S.



Connect several connecting wires on the PE copper bar as some parts inside the energy storage controller need to be grounded, please do not change them without permission, so as to avoid electric shock

5.6 Communication

ATS-S communicates with HPS via CAN. The following figure is the schematic diagram of the control board interface.


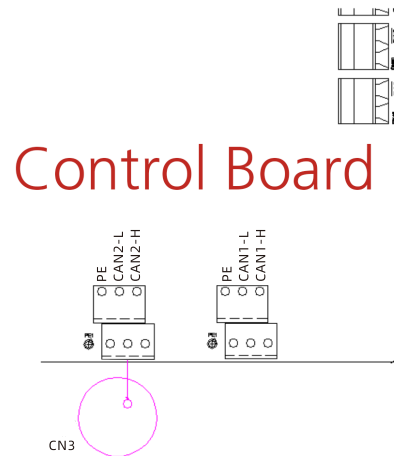


Schematic diagram of the control board interface

5.7 ATS-S internal power supply wiring

The internal DC power supply of ATS-S is taken from the HPS battery side, and the AC power supply is taken from the grid or DG.

5.8 Cable connection between HPS and ATS-S

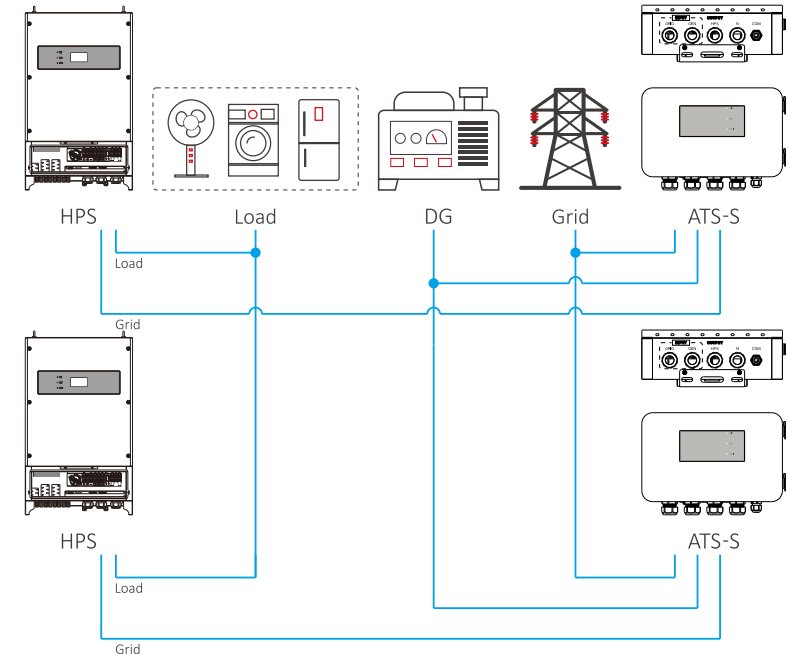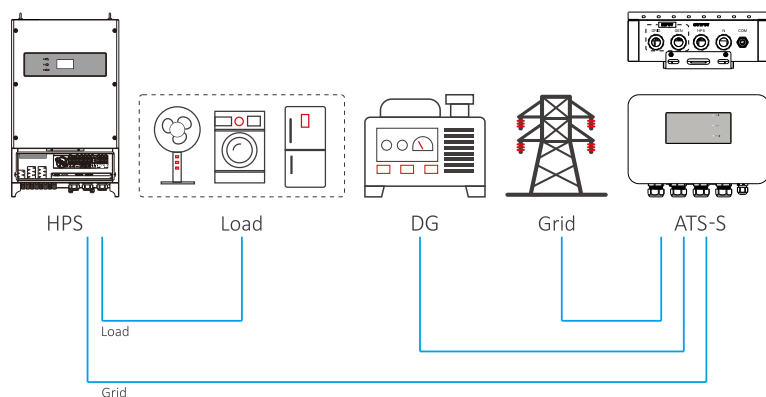

Commissioning 6

6.1 Inspection before operation

Before ATS-S is put into operation, its installation shall be inspected. At least two staff do the inspection according to the items listed below to ensure the correctness of the installation.

Inspection items for installation

- There is no deformation or damage to ATS-S.
- Bottom of ATS-S is fixed securely, the foundation support is stable and reliable.
- There is enough space around ATS-S.
- The temperature, humidity and ventilation conditions of the environment where ATS-S is located meet the requirements.
- Cabinet sealing protection is complete and reliable.

Electrical inspection

- ATS-S is grounded completely and firmly.
- The grid voltage matches the rated output voltage of ATS-S.
- The phase sequence of grid connection is correct, and the tightening torque meets the requirements.
- Cable number is marked correctly and clearly.
- The insulation protection cover is complete and reliable, and the danger warning label is clear and firm.

Other inspection

- There are no tools, parts, conductive dust or other foreign matters left inside the cabinet.
- There is no condensation of moisture or ice in the cabinet.

7 Routine Maintenance

7.1 Regular maintenance

7.1.1 Maintenance and repair



CAUTION!

All maintenance and repair operations on the ATS-S can only be performed when the ATS-S is safely disconnected from all external connections, and it is confirmed that these power supplies will not be connected again and wait for at least 5 minutes.

Only professional technicians familiar with the system operation can perform such operation.

● Disconnect the circuit breaker

Disconnect all switches and use a multimeter to verify that the device is completely disconnected and no voltage is detected.

● Maintenance and modification

Only personnel authorized by ATESS can maintain and modify ATS-S. To ensure personal safety, please use only the original components provided by the manufacturer. Otherwise there will be no guarantee on compliance with relevant certification standards in terms of electrical safety, EMC, etc.



CAUTION!

1. After power off, wait for 5 minutes to confirm the safety before maintenance.
2. When safety assured, the disassembly and assembly work could be carried out.

7.1.2 Regular maintenance

In order to ensure the normal operation of ATS-S, regular maintenance work is required.

Recommended routine maintenance cycle and work, as shown in Table 7-2.

Maintenance item	Frequency
Clean heat sink of the power module	every month
Check the dust, moisture or condensation inside the cabinet	every month
Check the cable connections, and fix the screw if necessary	every month
Check the warning label, add or replace some if necessary	every month
Manual checks AC and DC circuit breakers	every month
Check if there is abnormal sound when ATS-S is operating	every week

Figure7-2 Routine maintenance work



CAUTION!

The maintenance operation of ATS-S must be carried out when all circuit breakers of ATS-S are disconnected. After the ATS-S circuit breaker is disconnected, some devices still have residual voltage. Please wait for at least five minutes to confirm safety before maintaining ATS-S to prevent electric shock.

7.2 Waste disposal

ATS-S will not cause environmental pollution, since the all the components meet the requirements of environmental protection. According to environmental protection requirements, user shall dispose ATS-S in accordance with the relevant laws and regulations.

8 Appendix

8.1 Specification

Parameter	ATS-S
Nominal voltage	208-400V
Nominal current	120A
Nominal frequency	50HZ/60HZ
Ingress Protection	IP65
Humidity	0%-95%
Operating temperature	-25°C-55°C
Dimension(W/H/D)	W425*D280*H167
Weight(kg)	10.5
Communication interface	CANA/485
Grid relay	120A
DG relay(optional)	120A

8.2 Ateess factory warranty

● Warranty period

The warranty period of this product is one year. If otherwise specified in the contract, the contract shall prevail.

During the warranty period, the customer shall show the invoice and date of purchase to the service personnel of ATESS. At the same time, the nameplate mark on the product shall be clear and visible, otherwise, ATESS has the right not to provide warranty service.

● Warranty conditions

In the event of failure during the warranty period, ATESS will repair or replace the product free of charge; The failed machine shall be owned by ATESS; the customer shall set aside some time to repair the faulty machine.

● Liability exemption

In case of the following circumstances, ATESS has the right not to conduct warranty:

Products without logo of ATESS Power Technology logo.

The product or component that has exceeded the valid warranty period of ATESS.

Failure or damage (such as high temperature, low temperature, too wet or dry, high altitude, unstable voltage or current, etc.) caused by working in beyond-specified environment or wrong installation, storage or use that violates the instructions.

Failure or damage caused by unauthorized installation, repair, modification or disassembly.

Except for those authorized by the after-sales center of ATESS.

Failure or damage caused by using components that not supplied by ATESS.

Failure, damage or transportation damage caused by accident or human factors (operation error, scratching, carrying, bumping, improper voltage connection etc.)

Failure or damage caused by force majeure (such as earthquake, lightning, fire etc.).

Failures or damages caused by other factors rather than quality problems of the supplied product itself(including components).